

M306NKT-EPB

Emulation Probe for M16C/6N Group M16C/6NK, 6NL, 6NM, 6NN, 6N4, 6N5

User's Manual

- * IC61-1004-051 is a trademark of Yamaichi Electronics Co., Ltd.
- * NQPACK, YQPACK, YQSOCKET, YQ-GUIDE, HQPACK, TQPACK and TQSOCKET are trademarks of Tokyo Eletech Corporation.

Keep safety first in your circuit designs!

• Renesas Technology Corporation and Renesas Solutions Corporation put the maximum effort into making semiconductor products better and more reliable, but there is always the possibility that trouble may occur with them. Trouble with semiconductors may lead to personal injury, fire or property damage. Remember to give due consideration to safety when making your circuit designs, with appropriate measures such as (i) placement of substitutive, auxiliary circuits, (ii) use of nonflammable material or (iii) prevention against any malfunction or mishap.

Notes regarding these materials

- These materials are intended as a reference to assist our customers in the selection of the Renesas Technology product best suited to the customer's application; they do not convey any license under any intellectual property rights, or any other rights, belonging to Renesas Technology Corporation, Renesas Solutions Corporation or a third party.
- Renesas Technology Corporation and Renesas Solutions Corporation assume no responsibility for any damage, or infringement of
 any third-party's rights, originating in the use of any product data, diagrams, charts, programs, algorithms, or circuit application
 examples contained in these materials.
- All information contained in these materials, including product data, diagrams, charts, programs and algorithms represents information on products at the time of publication of these materials, and are subject to change by Renesas Technology Corporation and Renesas Solutions Corporation without notice due to product improvements or other reasons. It is therefore recommended that customers contact Renesas Technology Corporation, Renesas Solutions Corporation or an authorized Renesas Technology product distributor for the latest product information before purchasing a product listed herein. The information described here may contain technical inaccuracies or typographical errors. Renesas Technology Corporation and Renesas Solutions Corporation assume no responsibility for any damage, liability, or other loss rising from these inaccuracies or errors. Please also pay attention to information published by Renesas Technology Corporation and Renesas Solutions Corporation by various means, including the Renesas home page (http://www.renesas.com).
- When using any or all of the information contained in these materials, including product data, diagrams, charts, programs, and algorithms, please be sure to evaluate all information as a total system before making a final decision on the applicability of the information and products. Renesas Technology Corporation and Renesas Solutions Corporation assume no responsibility for any damage, liability or other loss resulting from the information contained herein.
- Renesas Technology semiconductors are not designed or manufactured for use in a device or system that is used under circumstances in which human life is potentially at stake. Please contact Renesas Technology Corporation, Renesas Solutions Corporation or an authorized Renesas Technology product distributor when considering the use of a product contained herein for any specific purposes, such as apparatus or systems for transportation, vehicular, medical, aerospace, nuclear, or undersea repeater use.
- The prior written approval of Renesas Technology Corporation and Renesas Solutions Corporation is necessary to reprint or reproduce in whole or in part these materials.
- If these products or technologies are subject to the Japanese export control restrictions, they must be exported under a license from the Japanese government and cannot be imported into a country other than the approved destination. Any diversion or reexport contrary to the export control laws and regulations of Japan and/or the country of destination is prohibited.
- Please contact Renesas Technology Corporation or Renesas Solutions Corporation for further details on these materials or the products contained therein.

Precautions to be taken when using this product

- This product is a development supporting unit for use in your program development and evaluation stages. In mass-producing your program you have finished developing, be sure to make a judgment on your own risk that it can be put to practical use by performing integration test, evaluation, or some experiment else.
- In no event shall Renesas Solutions Corporation be liable for any consequence arising from the use of this product.
- Renesas Solutions Corporation strives to renovate or provide a workaround for product malfunction at some charge or without charge.
 However, this does not necessarily mean that Renesas Solutions Corporation guarantees the renovation or the provision under any circumstances.
- This product has been developed by assuming its use for program development and evaluation in laboratories. Therefore, it does not
 fall under the application of Electrical Appliance and Material Safety Law and protection against electromagnetic interference when
 used in Japan.
- For inquiries about the contents of this document or product, fill in the text file the installer of the emulator debugger generates in the following directory and email to your local distributor.

 $\verb|SUPPORT| Product-name| \verb|SUPPORT.TXT| \\$

Renesas Tools Homepage http://www.renesas.com/en/tools

Preface

The M306NKT-EPB is an emulation probe for the M16C/6N Group M16C/6NK, M16C/6NL, M16C/6NM, M16C/6NN, M16C/6N4, M16C/6N5 MCUs. The M306NKT-EPB is used by connecting to the PC7501 emulator main unit.

This user's manual mainly describes specifications of the M306NKT-EPB emulation probe and how to setup it. For details on the following products, which are used with the M306NKT-EPB, refer to each product's user's manual.

- Emulator: PC7501 User's Manual- Emulator debugger: M3T-PD30F User's Manual

All the components of this product are shown in "Table 2.1 Package components" (page 20). If there is any question or doubt about this product, contact your local distributor.

To Use This Product Properly

Precautions for Safety:



- In both this user's manual and on the product itself, several icons are used to insure proper handling of this product and also to prevent injuries to you or other persons, or damage to your properties.
- The icons' graphic images and meanings are given in "Chapter 1. Precautions for Safety" (page 7). Be sure to read this chapter before using the product.

Contents

Chapter 1. Precautions for Safety	7
1.1 Safety Symbols and Meanings	8
WARNING	9
Warning for Installation	9
Warning for Use Environment	9
CAUTION	
Caution to Be Taken for Modifying This Product	
Cautions to Be Taken for Turning On the Power	
Cautions to Be Taken for Handling This Product	
Caution to Be Taken for Malfunctions	
Caution to Be Taken for External Trigger Input Voltage	
IMPORTANT	
Notes on Downloading Firmware	
Notes on Self-check	
Note on Quitting the Emulator Debugger	
Note on Final Evaluation	
Notes on Power Supply to the User System	
Note on Selecting an MCU File	
Note on RESET* Input	
Note on NMI* Input	
Note on RDY* Input	
Note on HOLD* Input	
Notes on Maskable Interrupts	
· ·	
Note on Clock Supply to the MCU	
Notes on Stack Area	
Note on Reset Vector Area	
Note on Accessing Addresses 00000h and 00001h	
Note on Stop and Wait Modes	
Note on Display of MCU Status	
Note on Breaks	
Notes on Address-Match Breaks	
Notes on Address-Match Interrupts	
Notes on Software Breaks	
Note on Differences between the Actual MCU and Emulator	
Note on the Watchdog Function	
Note on DMA Transfer	
Note on Protect Register	
Notes on Pullup Control	
Note on Operating Frequency	
Notes on Internal Flash ROM of the MCU	
Note on Setting "1" to Protect Bit 2 (PRC2) in Division by 2 Mode	
Note on Returning from Stop Mode with the On-chip Oscillator Clock	
Notes on Debugging in CPU Rewrite Mode:	
Note on the Version of the M3T-PD30F	
Chapter 2. Preparation	
2.1 Package Components	
2.2 Other Tool Products Required for Development	20
2.3 Name of Each Part	
2.3.1 System Configuration	
2.3.2 Names and Functions of the PC7501 Upper Panel LEDs	22

	2.4 When Using the Emulator for the First Time	
	2.4.1 Downloading Firmware	24
	2.4.2 Self-check	24
Chapter 3.	Setup	25
	3.1 Selecting Clock Supply	26
	3.1.1 Clocks	26
	3.1.2 Using an Internal Oscillator Circuit Board	26
	3.1.3 Using the Oscillator Circuit on the User System	29
	3.1.4 Using the Internal Generator Circuit	30
	3.2 A-D Conversion Bypass Capacitors	31
	3.3 Pullup of Emulation Ports	32
	3.4 Connecting the PC7501	33
	3.5 Connecting the User System (M16C/6N4, /6N5)	34
	3.5.1 Connecting to a 100-pin LCC Socket	35
	3.5.2 Connecting to a 100-pin 0.65-mm-pitch Foot Pattern (Part 1)	
	3.5.3 Connecting to a 100-pin 0.65-mm-pitch Foot Pattern (Part 2)	37
	3.5.4 Connecting to a 100-pin 0.65-mm-pitch Foot Pattern (Part 3)	
	3.6 Connecting the User System (M16C/6NK, /6NL, /6NM, /6NN)	39
	3.6.1 Connecting to a 100-pin 0.5-mm-pitch Foot Pattern (Part 1)	40
	3.6.2 Connecting to a 100-pin 0.5-mm-pitch Foot Pattern (Part 2)	41
	3.6.3 Connecting to a 100-pin 0.5-mm-pitch Foot Pattern (Part 3)	42
	3.6.4 Connecting to a 128-pin 0.5-mm-pitch Foot Pattern	43
Chapter 4.	Usage	45
	4.1 Turning On the Power	46
	4.1.1 Checking Connections of the Emulator System	
	4.1.2 Turning ON/OFF the Power	46
	4.1.3 Power Supply to the User System	46
	4.1.4 LED Display When the PC7501 Starts Up Normally	
	4.2 Downloading Firmware	
	4.2.1 When It is Necessary to Download Firmware	
	4.2.2 Downloading Firmware in Maintenance Mode	
	4.3 Self-check	
	4.3.1 Self-check Procedure	
	4.3.2 If an Error is Detected in the Self-check	50
Chapter 5.	Specifications	
	5.1 Specifications	
	5.2 Operation Timing of Memory Expansion Mode and Microprocessor Mode (5 V)	
	5.3 Connection Diagram	
	5.4 External Dimensions	
	5.4.1 External Dimensions of the Emulation Probe	
	5.4.2 External Dimensions of the Converter Board M30800T-PTC	
	5.4.3 External Dimensions of the Converter Board M3T-F160-100NSD	
	5.4.4 External Dimensions of the Converter Board M3T-F160-128NRD	
Chapter 6.	Troubleshooting	
	6.1 Flowchart to Remedy the Troubles	
	6.2 When the Emulator Debugger Does Not Start Up Properly	
Chapter 7.	Maintenance and Guarantee	
	7.1 Maintenance	
	7.2 Guarantee	
	7.3 Repair Provisions	
	7.4 How to Request for Repair	71

Terminology

Some specific words used in this user's manual are defined as follows:

PC7501 system

This means an emulator system built around the PC7501 emulator. The PC7501 emulator system is configured with an emulator main unit PC7501, emulation probe M306NKT-EPB, emulator debugger M3T-PD30F and host machine.

Emulator main unit PC7501

This means an emulator for the M16C Family MCUs. You can configure your emulator system by changing emulation probes according to your target MCU.

Emulation probe M306NKT-EPB

This means the emulation probe (this product) for the M16C/6N Group M16C/6NK, M16C/6NL, M16C/6NM, M16C/6NN, M16C/6NA, M16C/6NS. It is used with the emulator main unit PC7501.

Emulator debugger M3T-PD30F

This means a software tool for the M16C/60 Series. You can control the emulator from a host machine through various interfaces.

Firmware

This means a program stored in the flash ROM of the emulator main unit PC7501. It analyzes contents of communication with the emulator debugger and controls the emulator PC7501. This program is downloadable from the emulator debugger to upgrade firmware or to support other MCUs.

Host machine

This means a personal computer used to control the PC7501 emulator system.

Target MCU

This means the microcomputer you are going to debug.

User system

This means a user's application system using the microcomputer to be debugged.

User program

This means a user's application program to be debugged.

Evaluation MCU

This means a microcomputer mounted on the emulation probe which is operated in the special mode for the emulator.

*

In this user's manual, this symbol is used to show active LOW. (e.g. RESET*)

Chapter 1. Precautions for Safety

This chapter describes precautions for using this product safely and properly. For precautions for the emulator main unit and the emulator debugger, refer to each user's manual included with your product.

1.1	Safety Symbols and Meanings	8
	WARNING	9
	Warning for Installation	9
	Warning for Use Environment	9
	CAUTION	10
	Caution to Be Taken for Modifying This Product	10
	Cautions to Be Taken for Turning On the Power	10
	Cautions to Be Taken for Handling This Product	10
	Caution to Be Taken for Malfunctions	10
	Caution to Be Taken for External Trigger Input Voltage	10
	IMPORTANT	11
	Notes on Downloading Firmware	11
	Notes on Self-check	11
	Note on Quitting the Emulator Debugger	11
	Note on Final Evaluation	11
	Notes on Power Supply to the User System	11
	Note on Selecting an MCU File	11
	Note on RESET* Input	11
	Note on NMI* Input	11
	Note on RDY* Input	12
	Note on HOLD* Input	12
	Notes on Maskable Interrupts	12
	Note on Clock Supply to the MCU	12
	Note on Access Prohibited Area	12
	Notes on Stack Area	12
	Note on Reset Vector Area	13
	Note on Accessing Addresses 00000h and 00001h	13
	Note on Stop and Wait Modes	13
	Note on Display of MCU Status	13
	Note on Breaks	14
	Notes on Address-Match Breaks	14
	Notes on Address-Match Interrupts	14
	Notes on Software Breaks	14
	Note on Differences between the Actual MCU and Emulator	15
	Note on the Watchdog Function	15
	Note on DMA Transfer	15
	Note on Protect Register	15
	Notes on Pullup Control	16
	Note on Operating Frequency	16
	Notes on Internal Flash ROM of the MCU	16
	Note on Setting "1" to Protect Bit 2 (PRC2) in Division by 2 Mode	
	Note on Returning from Stop Mode with the On-chip Oscillator Clock	
	Notes on Debugging in CPU Rewrite Mode	
	Note on the Version of the M3T-PD30F	

1.1 Safety Symbols and Meanings

In both the user's manual and on the product itself, several icons are used to insure proper handling of this product and also to prevent injuries to you or other persons, or damage to your properties.

This chapter describes the precautions which should be taken in order to use this product safely and properly. Be sure to read this chapter before using this product.



WARNING If the requirements shown in the "WARNING" sentences are ignored, the equipment may cause serious personal injury or death.

If the requirements shown in the "CAUTION" sentences are ignored, the equipment may malfunction.

IMPORTANT:

It means important information on using this product.

In addition to the three above, the following are also used as appropriate.

Ameans WARNING or CAUTION.

Example: ACAUTION AGAINST AN ELECTRIC SHOCK

means PROHIBITION

Example: DISASSEMBLY PROHIBITED

means A FORCIBLE ACTION

Example: UNPLUG THE POWER CABLE FROM THE RECEPTACLE.

The following pages describe the symbols "WARNING", "CAUTION", and "IMPORTANT".

⚠ WARNING

Warning for Installation:



• Do not set this product in water or areas of high humidity. Make sure that the main unit does not get wet. Spilling water or some other liquid into the main unit can cause an unrepairable damage.

Warning for Use Environment:



• This equipment is to be used in an environment with a maximum ambient temperature of 35°C. Care should be taken that this temperature is not exceeded.

⚠ CAUTION

Note on Connecting a Power Supply of the Emulator:



• Do not modify this product. Modifying or disassembling this product will void your warranty.

Cautions to Be Taken for Turning On the Power:



- Turn on the power of the emulator and user system as simultaneously as possible.
- Turn off the power of the emulator and user system as simultaneously as possible.
- Do not leave either the emulator or user system powered on, because of leakage current the internal circuits may be damaged.
- When turning on the power again after shutting off the power, wait about 10 seconds.

Cautions to Be Taken for Handling This Product:



- Use caution when handling the main unit. Be careful not to apply a mechanical shock.
- Do not touch the connector pins of the emulator main unit and the target MCU connector pins. Static electricity may damage the internal circuits.
- Do not pull this product by the flexible cable for connecting to the emulator main unit and emulation probe. The cable may cause a break.
- Do not flex the flexible cable for connecting to the emulator main unit and emulation probe excessively. The cable may cause a break.
- Do not use inch-size screws for this equipment. The screws used in this equipment are all ISO (meter-size) type screws. When replacing screws, use same type screws as equipped before.

Caution to Be Taken for Malfunctions:



- If the emulator malfunctions because of interference like external noise, do the following to remedy the trouble.
 - (1) Press the system reset switch on the emulator front panel.
 - (2) If normal operation is not restored after step (1), shut OFF power to the emulator once and then reactivate it.

Caution to Be Taken for External Trigger Input Voltage:



• Keep an external trigger input voltage of the emulator main unit less than a Vcc voltage. Overvoltage may cause damage to the internal circuits.

Notes on Downloading Firmware:

- Before using this product for the first time, it is necessary to download the dedicated firmware. Please note that, to do this, it is necessary to start up the emulator main unit in maintenance mode. For downloading firmware, see "4.2 Downloading Firmware" (page 48). Once the firmware has been downloaded, the product can be used by simply turning on the power.
- Do not shut off the power while downloading the firmware. If this happens, the product will not start up properly. If the power is shut off unexpectedly, redownload the firmware.
- Download the firmware with the user system not connected.

Notes on Self-check:

- If the self-check does not result normally (excluding user system errors), the emulation probe may be damaged. Then contact your local distributor.
- Run the self-check with the user system not connected.

Note on Quitting the Emulator Debugger:

• To restart the emulator debugger, always shut power to the emulator module off once and then on again.

Note on Final Evaluation:

• Be sure to evaluate your system with an evaluation MCU. Before starting mask production, evaluate your system and make final confirmation with a CS (Commercial Sample) version MCU.

Notes on Power Supply to the User System:

- Pin Vcc is connected to the user system to observe the voltage. Therefore, the power is not supplied to the user system from the emulator, design your system so that the user system is powered separately.
- The voltage of the user system should be as follows.

$$3.0 \text{ V} \leq \text{Vcc} \leq 5.5 \text{ V}$$

• Do not change the voltage of the user system after turning on the power.

Note on Selecting an MCU File:

• Select the MCU file "M16C6NK.mcu" at the startup of the emulator debugger.

Note on RESET* Input:

• A low input to pin RESET* from the user system is accepted only when a user program is being executed (when the RUN status LED on the PC7501's front panel is lit).

Note on NMI* Input:

• A low input to pin NMI* from the user system is accepted only when a user program is being executed (when the RUN status LED on the PC7501's front panel is lit).

Note on RDY* Input:

• Be sure to input a low to pin RDY* of the user system during the user program execution (only while the RUN status LED on the PC7501's upper panel is lit). Inputting a low signal to pin RDY* when the user program is stopped may cause a malfunction of the emulator.

Note on HOLD* Input:

• Be sure to input a low to pin HOLD* of the user system during the user program execution (only while the RUN status LED on the PC7501's upper panel is lit). Inputting a low signal to pin HOLD* when the user program is stopped may cause a malfunction of the emulator.

Notes on Maskable Interrupts:

- Even if a user program is not being executed (including when run-time debugging is being performed), the evaluation MCU keeps running so as to control the emulation probe. Therefore, timers and other components do not stop running.
 - If a maskable interrupt is requested when the user program is not being executed (including when run-time debugging is being performed), the maskable interrupt request cannot be accepted, because the emulator disables interrupts. The interrupt request is accepted immediately after the user program execution is started.
- Take note that when the user program is not being executed (including when run-time debugging is being performed), a peripheral I/O interruption is not accepted.

Note on Clock Supply to the MCU:

- A clock supplied to the evaluation MCU is selected by the Emulator tab in the Init dialog box of the emulator debugger.
 - (1) When "Internal" is selected:
 - A clock generated by the oscillator circuit board in the PC7501 is supplied. It is continually supplied regardless of the status of the user system clock and that of the user program execution.
 - (2) When "External" is selected:
 - A clock generated by the oscillator in the user system is supplied. It depends on the status of the oscillation (on/off) of the user system.
 - (3) When "Generate" is selected:
 - A clock generated by the dedicated circuit in the PC7501 is supplied. It is continually supplied regardless of the status of the user system clock and that of the user program execution.

Note on Access Prohibited Area:

• You cannot use internally reserved areas. Write signals to the areas will be ignored, and values read will be undefined.

Notes on Stack Area:

- With this product, a maximum 8 bytes of the user stack is consumed as a work area.
 Even if the user stack does not have an enough area, do not use areas which cannot be used as a stack (SFR area, RAM area which stores data, or ROM area) as a work area. Using areas like this is a cause of user program crashes and destabilized emulator control.
- With this product, the interrupt stack pointer (ISP) is set at 00500h and used as a stack area after a reset is released.

Notes on Reset Vector Area:

- Memory in the emulator main unit is always selected as a reset vector area (FFFFCh--FFFFFh) in order to operate the evaluation MCU in the emulator-dedicated mode. Set the contents of the reset vector area in one of the following ways.
 - (1) Download a user program to an area including the reset vector area.
 - (2) Set the reset vector using a memory window of the emulator debugger etc.
- You can change data in the reset vector area only when the user program is stopped.
- Do not access the reset vector area as data. It may not be accessed properly, and the program may not run properly in the next bus cycle.

Note on Accessing Addresses 00000h and 00001h:

• With the M16C/60 Series MCUs, when a maskable interrupt is generated, the interrupt data (interrupt number and interrupt request level) stored in addresses 00000h and 00001h is read out. Also, the interrupt request bit is cleared when address 00000h or 00001h is read out. Consequently, when the address 00000h or 00001h readout instruction is executed or when address 00000h or 00001h is read out in the cause of a program runaway, a malfunction occurs in that the interrupt is not executed despite the interrupt request, because the request bit of the highest priority interrupt factor enabled is cleared. For this malfunction, when the reading out to address 00000h or 00001h is generated excluding the

For this malfunction, when the reading out to address 00000h or 00001h is generated excluding the interrupt, the WARNING LED (yellow) lights up to alarm. When this LED lights, there is a possibility of wrong access, therefore check the user program.

Note on Stop and Wait Modes:

• Do not single step an instruction shifting to stop or wait mode. It may cause communication errors.

Note on Display of MCU Status:

- "MCU status" you can refer to in the MCU tab of the MCU Setting dialog box of the emulator debugger shows pin levels of the user system. Make sure that proper pin levels are specified according to the mode you use.
 - (1) When single-chip mode is used:

CNVss: Low

- (2) When memory expansion mode 16-bit data bus width is used:
 - CNVss: Low, BYTE: Low, HOLD*: High, RDY*: High
- (3) When memory expansion mode 8-bit data bus width is used:
 - CNVss: Low, BYTE: High, HOLD*: High, RDY*: High
- (4) When microprocessor mode 16-bit data bus width is used:
 - CNVss: High, BYTE: Low, HOLD*: High, RDY*: High
- (5) When microprocessor mode 8-bit data bus width is used: CNVss: High, BYTE: High, HOLD*: High, RDY*: High

Note on Breaks:

- The area displaying break points in the program window of the emulator debugger shows the following breaks.
 - (1) Address-match break "A"

This is a debugging function which breaks a program, using the address-match interrupt function of the MCU, immediately before the system executes an instruction at a specified address. The instruction at the preset address will not be executed.

(2) Software break "B"

This is a debugging function which generates a BRK interruption by changing an instruction at a specified address to a BRK instruction (00h) to break a program immediately before the system executes an instruction at a specified address. The instruction at the preset address will not be executed.

(3) Hardware break "H"

This is a debugging function which breaks a program by setting the detection of an execution of an instruction at a specified address as a break event. The program will break after the instruction at the specified address is executed.

Notes on Address-Match Breaks:

- As the processing speed of setting and canceling address-match breaks is relatively fast, you can save the times of writing into the internal flash ROM of an MCU. Therefore, address-match breaks precede the other breaks when setting breakpoints in the internal flash ROM area of an MCU.
- Address-match breaks can be set only in RAM and ROM areas of an MCU.
- Address-match breaks can be set at up to 8 points. The other breaks are set as software breaks.
- Address-match breaks can be set or canceled even when the user program is being executed.

Notes on Address-Match Interrupts:

- When you use the address-match interrupt function in a user program, uncheck "Enable the Address Match Interrupt Break Function" in the MCU tab of the Init dialog box of the emulator debugger. Thus, normal software breaks are used for the internal RAM and ROM areas of an MCU.
- Do not set a software break at an address where an address-match interrupt occurs. Otherwise, a user program may be run out of control. Set a software or hardware break in the top address in address-match interrupt processing.
- When you single step an address where an address-match interrupt occurs, the program stops after executing the first instruction after returning from address-match interrupt processing.

Notes on Software Breaks:

- Software breaks change the instruction at a specified address to a BRK (00h). Therefore, take note that when you reference the result of a trace in bus mode, "00h" is displayed.
- The BRK instruction can be used for the emulator only. You cannot use it in a user program.
- You can neither set nor cancel a software breakpoint in the internal ROM area of an MCU during user program execution, while you can set or cancel it in the internal RAM area of an MCU and the area (emulation memory) where the map setting is INTERNAL in chip-select CS3* to CS0*.

Note on Differences between the Actual MCU and Emulator:

- Operations of the emulator system differ from those of actual MCUs as listed below.
 - (1) Reset condition
 - Set the time for starting up (0.2 Vcc to 0.8 Vcc) 1 µs or less.
 - (2) Initial values of internal resource data of an MCU at power-on
 - (3) Interrupt stack pointer (ISP) after a reset is released
 - (4) Capacities of the internal memories (ROM and RAM) The evaluation MCU of this product has RAM of 31 KB (00400h--07FFFh) and flash ROM of 4 KB (0F000h--0FFFFh) and 512 KB (80000h--FFFFFh).
 - (5) Oscillator circuit

In the oscillator circuit where an oscillator is connected between pins X_{IN} and X_{OUT} , oscillation does not occur because a converter board is used between the evaluation MCU and the user system. It is same for pins X_{CIN} and X_{COUT} . For notes on when using the oscillator circuit on the user system, refer to "3.1.3 Using the Oscillator Circuit on the User System" (page 29).

(6) A-D conversion

The characteristics of the A-D converter differ from those of actual MCU because there are a converter board and other devices between the evaluation MCU and the user system.

(7) Ports P0 to P5, P10

This product emulates some I/O ports (P0 to P5, P10). Therefore, the electrical characteristics of these ports differ from those of an actual MCU.

- (8) Address and status of BHE*
 - When the internal RAM or ROM area of an MCU is accessed during user program execution, actual MCUs retain a preceding address and status of BHE*, while this product does not.
- (9) Status of a data bus
 - In stop or wait mode, actual MCUs retain a preceding status of a data bus, while with this product a data bus is floating.
- (10) Operation after releasing the reset

After releasing the reset, for about up to 380 cycles, a program to control the emulator will be executed. Note that this will be included in a user program execution time and tracing result.

Note on the Watchdog Function:

• If the reset circuit of the user system has a watchdog timer, disable it when using the emulator.

Note on DMA Transfer:

• With this product, the program is stopped with a loop program to a specific address. Therefore, if a DMA request is generated while the program is stopped, DMA transfer is executed. However, make note that DMA transfer while the program is stopped may not be performed correctly. Also note that the below registers have been changed to generate DMA transfer as explained here even when the program is stopped.

DMA0 transfer counter: TCR0
 DMA1 transfer counter: TCR1

Note on Protect Register:

- The protect is not canceled when bit 2 of protect register PRCR (PRC2), which enables writing into the ports P7 and P9 direction registers and the SI/Oi control register, is changed with the below procedure.
 - (1) Step execution of an instruction setting PRC2 to "1"
 - (2) Setting a break point between an instruction setting PRC2 to "1" and a point where the ports P7 and P9 direction registers or the SI/Oi control register is set
 - (3) Setting PRC2 to "1" by the memory window or script window

Notes on Pullup Control:

- Because this product emulates some I/O ports (P0 to P5, P10), you can not pullup ports P0 to P5 by the pullup control registers. Install the included resistor arrays (51 k Ω) as necessary.
- The initial value of pullup control register 1 PUR1 of this product is different from that of an actual MCU. When a Vcc level is input to pin CNVss, the value of an actual MCU is "02h" (bit 1 PU11 is "1"), while that of this product is "00h".

Note on Operating Frequency:

• You can not use this product with a main clock (X_{IN}-X_{OUT}) less than 1 MHz. To use it with a main clock less than 1 MHz, contact your local distributor.

Notes on Internal Flash ROM of the MCU:

- This product downloads a user program to the flash ROM in an MCU when debugging in single-chip or memory expansion mode. By checking "Disable the Internal Flash ROM" in the MCU tab of the MCU setting dialog box of the emulator debugger, you can disable the operation of the internal flash ROM of the MCU to use the emulation memory. However, the maximum operating frequency is 10 MHz.
- Because the number of write/erase cycles of the internal flash ROM of the MCU is limited, it must be replaced at the end of its service-life.
- If the following errors occur frequently when downloading a program, replace the MCU board.
 - (1) Flash ROM erase error occurred ERROR (16258)
 - (2) Flash ROM verify error occurred ERROR (16259)

To purchase products for replacement, contact your local distributor.

Note on Setting "1" to Protect Bit 2 (PRC2) in Division by 2 Mode:

- Under the following conditions, even if you enable the PRC2 bit, writing to the registers protected by the PRC2 bit (PD7, PD9, S3C, S4C, S5C and S6C) cannot be done properly.
 - (1) Between when stop mode is released and when a hardware reset is executed
 - (2) Between when low power dissipation mode is enabled and when a hardware reset is executed Therefore, if the condition (1) or (2) applies, when you enable the PRC2 bit and write to the registers protected by the PRC2 (PD7, PD9, S3C, S4C, S5C and S6C), set the CPU clock neither to the main clock in division by 2 mode nor to the on-chip oscillator clock in division by 2 mode.

Note on Returning from Stop Mode with the On-chip Oscillator Clock:

- When this product shifts from on-chip oscillator mode or on-chip oscillator low power dissipation mode to stop mode, it cannot be returned with an interrupt other than the NMI.
 Interrupts with which this product cannot return:
 - (1) Key input interrupt
 - (2) INT interrupt
 - (3) Interrupts of timers A and B
 - (4) Serial I/O interrupt

Notes on Debugging in CPU Rewrite Mode:

- When you debug the M16C/6N Group M16C/6NK, M16C/6NL, M16C/6NM, M16C/6NN, M16C/6N4, M16C/6N5 MCUs in CPU rewrite mode, do not change the block 0 area (FF000h--FFFFFh) of the flash memory. Otherwise, the emulator will be uncontrollable.
- If you check "Debug the program using CPU Rewrite Mode" in the MCU tab of the Init dialog box of the emulator debugger, you cannot use the following functions.
 - (1) Setting software breakpoints in an internal ROM area
 - (2) Executing COME in an internal ROM area
- In the rewrite control program area (from setting CPU rewrite mode to releasing it), do not use the following functions.
 - (1) Single-stepping
 - (2) Setting software breakpoints
 - (3) Setting hardware breakpoints
- To reference data after executing CPU rewrite, stop the program at a point which is not a rewrite control program area and use a memory window etc.
- As the following interrupt vectors are used by the emulator system, the read data is different from expected value.
 - (1) BRK instruction (FFFE4h--FFFE7h)
 - (2) Address match (FFFE8h--FFFEBh)
 - (3) Single-step (FFFECh--FFFEFh)
 - (4) DBC (FFFF4h--FFFF7h)

Note on the Version of the M3T-PD30F:

• Be sure to use this product with the emulator debugger M3T-PD30F V2.20 or later.

МЕМО		

Chapter 2. Preparation

This chapter describes the package components, the system configuration and the preparation for using this product for the first time.

2.1	Package Components	20
	Other Tool Products Required for Development	
	Name of Each Part	
	2.3.1 System Configuration	21
	2.3.2 Names and Functions of the PC7501 Upper Panel LEDs	
	When Using the Emulator for the First Time	
	2.4.1 Downloading Firmware	
	2.4.2 Self-check	

2.1 Package Components

The M306NKT-EPB package consists of the following items. When unpacking it, check to see if your M306NKT-EPB contains all of these items.

Table 2.1 Package components

Item	Quantity
M306NKT-EPB emulation probe	1
M30800T-PTC converter board for 100-pin 0.65-mm-pitch LCC	1
IC61-1004-051 LCC socket (100-pin 0.65-mm-pitch) made by Yamaichi Electronics Co., Ltd.	1
OSC-3 (16 MHz) oscillator circuit board	1
OSC-2 oscillator circuit bare board	1
Resistor arrays (51 k Ω) for ports P0 to P5 pullup	6
Hardware tool user registration FAX sheet (English)	1
Hardware tool user registration FAX sheet (Japanese)	1
M306NKT-EPB User's Manual (this manual)	1
M306NKT-EPB User's Manual (Japanese)	1

^{*} Please keep the M306NKT-EPB's packing box and cushion material in your place for reuse at a later time when sending your product for repair or other purposes. Always use these packing box and cushion material when transporting this product.

2.2 Other Tool Products Required for Development

To bring forward programs development on the M16C/6N Group M16C/6NK, M16C/6NL, M16C/6NM, M16C/6NN, M16C/6NN, M16C/6N4, M16C/6N5, the products listed below are necessary in addition to those contained package above. Get them separately.

Table 2.2 Other tool products required for development

Product		Product name	Notes
Em	ulator main unit	PC7501	Required
Em	ulator debugger	M3T-PD30F	Required
Converter board	100-pin 0.65-mm-pitch QFP (100P6S-A)	M3T-100LCC-DMS + M3T-DIRECT100S M3T-100LCC-DMS + M3T-DUMMY100S M3T-100LCC-DMS + M3T-FLX-100NRB	Required according to a foot pattern of a user system See "3.5 Connecting the User System (M16C/6N4, /6N5)" (page 34).
Conv	100-pin 0.5-mm-pitch LQFP (100P6Q-A) 128-pin 0.5-mm-pitch LQFP (128P6Q-A)	M3T-F160-100NSD M3T-100LCC-QSD M3T-100LCC-DMS + M3T-FLX-100NSD M3T-F160-128NRD	Required according to a foot pattern of a user system See "3.6 Connecting the User System (M16C/6NK, /6NL, /6NM, /6NN)" (page 39).

^{*} For purchasing these products, contact your local distributor.

^{*} If there is any question or doubt about the packaged product, contact your local distributor.

^{*} For purchasing the IC61-1004-051 or for technical information, contact Yamaichi Electronics Co., Ltd. http://www.yamaichi.co.jp/e/index.shtml

2.3 Name of Each Part

2.3.1 System Configuration

Figure 2.1 shows a configuration of the PC7501 system.

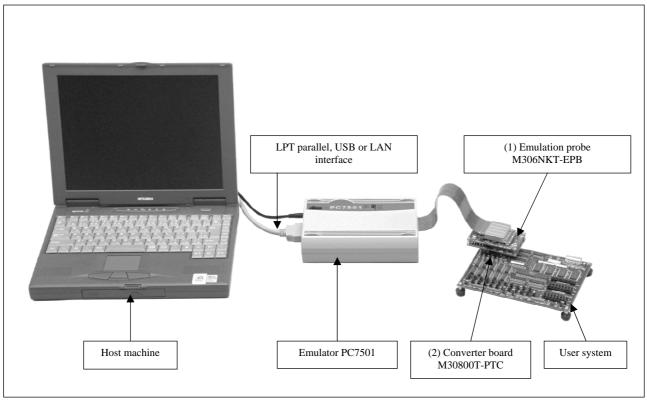


Figure 2.1 System configuration

(1) Emulation probe M306NKT-EPB

This emulation probe consists of the interface board (to the PC7501) PCA7501EPBA for the M16C/60 Series and MCU board M306NKT-EPBM for the M16C/6N Group M16C/6NK, M16C/6NL, M16C/6NM, M16C/6NN, M16C/6N4, M16C/6N5.

(2) Converter board M30800T-PTC

This is a converter board for connecting to the 100-pin 0.65-mm-pitch LCC socket IC61-1004-051 on the user system. For details, refer to "3.5 Connecting the User System (M16C/6N4, /6N5)" (page 34) or "3.6 Connecting the User System (M16C/6NK, /6NL, /6NM, /6NN)" (page 39).

2.3.2 Names and Functions of the PC7501 Upper Panel LEDs

Figure 2.2 shows the names of the LEDs on the upper panel of the PC7501.

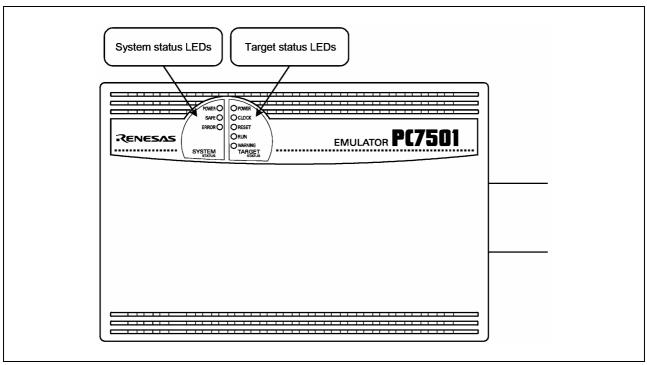


Figure 2.2 Names of the LEDs on the upper panel of the PC7501

(1) System Status LEDs

The system status LEDs indicate the emulator PC7501's power supply, firmware operating status, etc. Table 2.3 lists the definition of each system status LED.

Table 2.3 Definition of the system status LEDs

Name	Status	Meaning
POWER	ON	PC7501 system is turned ON.
	OFF	PC7501 system is turned OFF.
SAFE	ON	PC7501 system is operating normally.
	Flashing	1. The self-check is being executed.
		2. Downloaded firmware is being written into memory.
		3. If the ERROR LED is flashing or turned on at the same time, the self-check cannot be
		executed because of malfunction of the user system.
	OFF	PC7501 system is not operating normally (system status error).
ERROR	ON	PC7501 system is not operating normally (system status error).
	Flashing	1. Firmware is being downloaded.
		2. If the SAFE LED is flashing at the same time or alternately, the self-check cannot be
executed because of malfunction of the user system.		executed because of malfunction of the user system.
	OFF	PC7501 system is operating normally.

(2) Target Status LEDs

The target status LEDs indicate operating status of the target MCU and power supply of the user system. Table 2.4 lists the definition of each target status LED.

Table 2.4 Definition of the target status LEDs

Name	Status	Meaning	
POWER	ON	Power is supplied to the user system.	
	OFF	Power is not supplied to the user system.	
CLOCK	ON	Target MCU clock is oscillating.	
	OFF	Target MCU clock is not oscillating.	
RESET	ON	Target MCU is being reset.	
	OFF	Target MCU is not being reset.	
RUN	ON	User program is being executed.	
	OFF	OFF User program has been halted.	
WARNING	WARNING ON Address 00000h or 00001h has been read out.		
	OFF Address 00000h or 00001h has not been read out.		

IMPORTANT

Note on Usage in Memory Expansion or Microprocessor Mode:

• When you use this product in memory expansion or microprocessor mode, be sure to design your system so that pins RDY* and HOLD* are not active at startup. Otherwise, it cannot startup normally.

Note on the Target Status POWER LED:

• If your MCU has two or more Vcc terminals, the LED does not light unless power is supplied to all the terminals.

Note on the Target Status CLOCK LED:

- If the LED is not turned on, check the following.
 - After powering on the PC7501 (before starting up the emulator debugger):
 Make sure that the oscillator circuit board is properly installed in the PC7501 and it is oscillating normally.
 - (2) After the emulator debugger is started up (after the Init dialog box settings are completed): Make sure that the oscillator selected in the Init dialog box is oscillating normally.

Note on Accessing Addresses 00000h and 00001h:

• With the M16C/60 Series MCUs, when a maskable interrupt is generated, the interrupt data (interrupt number and interrupt request level) stored in addresses 00000h and 00001h is read out. Also, the interrupt request bit is cleared when address 00000h or 00001h is read out. Consequently, when the address 00000h or 00001h readout instruction is executed or when address 00000h or 00001h is read out in the cause of a program runaway, a malfunction occurs in that the interrupt is not executed despite the interrupt request, because the request bit of the highest priority interrupt factor enabled is cleared. For this malfunction, when the reading out to address 00000h or 00001h is generated excluding the interrupt, the WARNING LED (yellow) lights up to alarm. When this LED lights, there is a possibility of wrong access, therefore check the user program.

2.4 When Using the Emulator for the First Time

2.4.1 Downloading Firmware

If you have purchased this emulation probe newly, you need to download the firmware. The download procedure is given in Figure 2.3.

Before downloading the firmware, check that emulator debugger M3T-PD30F is installed to your host machine and the PC7501 is connected to the host machine. For more details, see each user's manual of the emulator debugger M3T-PD30F and the PC7501.

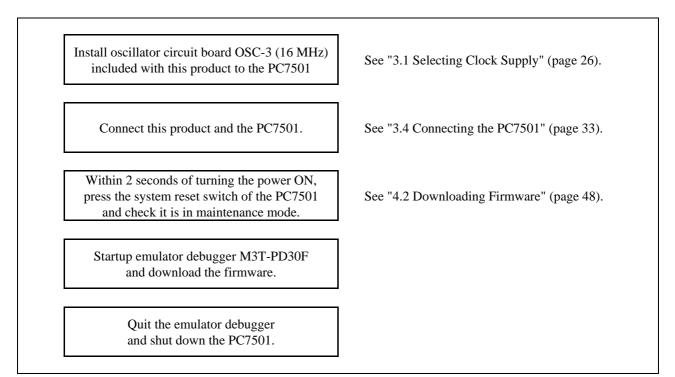


Figure 2.3 Firmware download procedure

2.4.2 Self-check

Execute the self-check after downloading the firmware to check that the emulation probe operates properly. Figure 2.4 shows the self-check procedure.

Within 2 seconds of turning the power ON, press the system reset switch of the PC7501 and check it is in maintenance mode.

Press the system reset switch of the PC7501 to start the self-check.

See "4.3 Self-check" (page 49).

After about 30 seconds, check that the self-check is terminated normally and shut down the PC7501.

Figure 2.4 Self-check procedure

Chapter 3. Setup

This chapter describes switch settings required for using this product and how to connect this product to the PC7501 and the user system.

3.1	Selecting Clock Supply	26
	3.1.1 Clocks	
	3.1.2 Using an Internal Oscillator Circuit Board	26
	3.1.3 Using the Oscillator Circuit on the User System	29
	3.1.4 Using the Internal Generator Circuit	30
3.2	A-D Conversion Bypass Capacitors	31
3.3	Pullup of Emulation Ports	32
3.4	Connecting the PC7501	33
3.5	Connecting the User System (M16C/6N4, /6N5)	34
	3.5.1 Connecting to a 100-pin LCC Socket	35
	3.5.2 Connecting to a 100-pin 0.65-mm-pitch Foot Pattern (Part 1)	36
	3.5.3 Connecting to a 100-pin 0.65-mm-pitch Foot Pattern (Part 2)	37
	3.5.4 Connecting to a 100-pin 0.65-mm-pitch Foot Pattern (Part 3)	38
3.6	Connecting the User System (M16C/6NK, /6NL, /6NM, /6NN)	39
	3.6.1 Connecting to a 100-pin 0.5-mm-pitch Foot Pattern (Part 1)	40
	3.6.2 Connecting to a 100-pin 0.5-mm-pitch Foot Pattern (Part 2)	41
	3.6.3 Connecting to a 100-pin 0.5-mm-pitch Foot Pattern (Part 3)	
	3.6.4 Connecting to a 128-pin 0.5-mm-pitch Foot Pattern	43

3.1 Selecting Clock Supply

3.1.1 Clocks

You can choose a clock supplied to the evaluation MCU by the Emulator tab in the Init dialog box of the emulator debugger. Table 3.1 shows the clocks and their initial settings.

Table 3.1 Clock supply to the MCU

Clock	Display of emulator debugger	Description	Default setting
	Internal	Internal oscillator circuit board (OSC-3 or OSC-2)	Yes
Main (X _{IN} -X _{OUT})	External	Oscillator circuit on the user system	-
	Generate	Internal generator circuit (1.016.0 MHz)	-
Cub (V V)	Internal	Internal oscillator circuit (32.768 kHz)	-
Sub (X _{CIN} -X _{COUT})	External	Oscillator circuit on the user system	Yes

3.1.2 Using an Internal Oscillator Circuit Board

(1) Kinds of Oscillator Boards

The PC7501 comes with an oscillator circuit board OSC-3 (30 MHz). And an oscillator circuit board OSC-3 (16 MHz) and a oscillator circuit bare board OSC-2 are included with this product. If you use an internal oscillator circuit board of the PC7501 as a main clock, choose "Internal" in the emulator debugger after replacing oscillator circuit boards to change a clock supplied to an MCU.

(2) Replacing an Oscillator Circuit Board

1. Remove the four screws of both sides of this product and lift off the upper cover (see Figure 3.1).

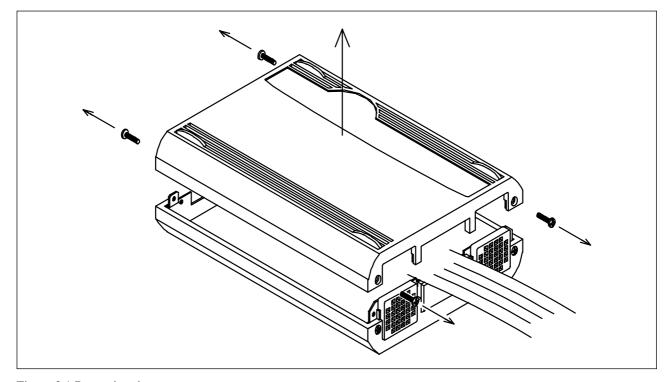


Figure 3.1 Removing the upper cover

2. Replace the oscillator circuit board (see Figure 3.2).

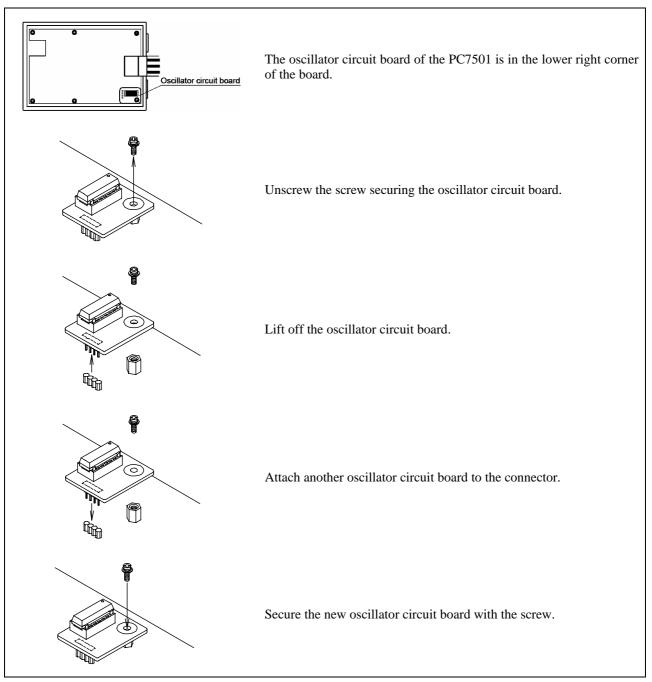


Figure 3.2 Replacing the oscillator circuit board

3. Reinstall the upper cover and secure the four screws.

A CAUTION

Note on Replacing the Oscillator Circuit Board:



• Always shut OFF power when removing the upper cover or replacing oscillator circuit board. Otherwise, internal circuits may be damaged.

(3) Using the Internal Oscillator Circuit Bare Board

To use the emulation probe at a frequency you like, build a desired oscillator circuit on the included OSC-2 oscillator circuit bare board. Figure 3.3 shows an external view of the OSC-2 oscillator circuit bare board and where the connector pins are located. Figure 3.4 shows the circuitry of the oscillator circuit bare board OSC-2. Use the number of oscillator circuits recommended by the oscillator manufacturer.

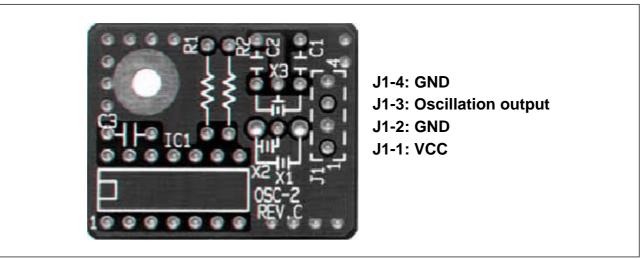


Figure 3.3 External view of the oscillator circuit board OSC-2 and its connector pin positions

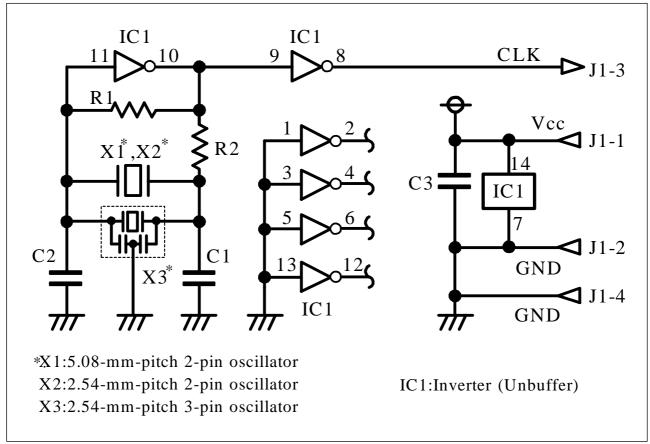


Figure 3.4 Circuits of the oscillator circuit bare board OSC-2

3.1.3 Using the Oscillator Circuit on the User System

To operate this product with an external clock, construct the oscillator circuit as shown in Figure 3.5 in the user system and input the oscillator output at 50% duty (within the operating range of the evaluation MCU) into pin X_{IN} . And pin X_{OUT} should be open. Choose "External" in the emulator debugger to use this clock.

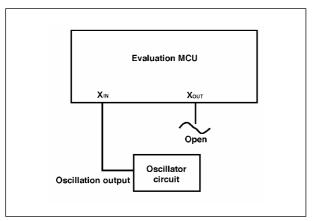


Figure 3.5 External oscillator circuit

Make note that in the oscillator circuit shown in Figure 3.6 where a resonator is connected between pins X_{IN} and X_{OUT} , oscillation does not occur because a converter board and other devices are used between the evaluation MCU and the user system. It is same for sub-clock oscillator circuits (X_{CIN} and X_{COUT}).

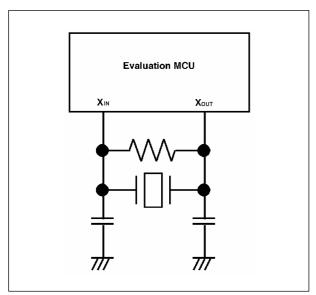


Figure 3.6 Circuit in which oscillation does not occur

3.1.4 Using the Internal Generator Circuit

The dedicated circuit in the PC7501 can generate any arbitrary frequency specified by the emulator debugger, and it can be supplied as a main clock. It does not depend on either the oscillator circuit board in the PC7501 or the oscillator circuit on the user system. If you want to debug programs without the user system or change a frequency temporarily, you can check its operation before purchasing an oscillator. If you want to use the internal generator circuit in the PC7501 as a main clock, choose "Generate" in the emulator debugger and specify a frequency you like to use this clock. Although you can change a frequency between 1.0 and 99.9 MHz by 0.1 MHz for the PC7501, do not specify a value exceeding the maximum input frequency of the $X_{\rm IN}$ of an MCU.

IMPORTANT

Note on Using the Internal Generator Circuit:

• The internal generator circuit is equipped for temporary debugging purposes. Temperature characteristics of frequencies are not guaranteed.

3.2 A-D Conversion Bypass Capacitors

There is a foot pattern on the M306NKT-EPBM board for mounting bypass capacitors for the A-D conversion circuit near the MCU. Mount suitable bypass capacitors as occasion demands. Figure 3.7 shows where they are installed and the configuration of this product.

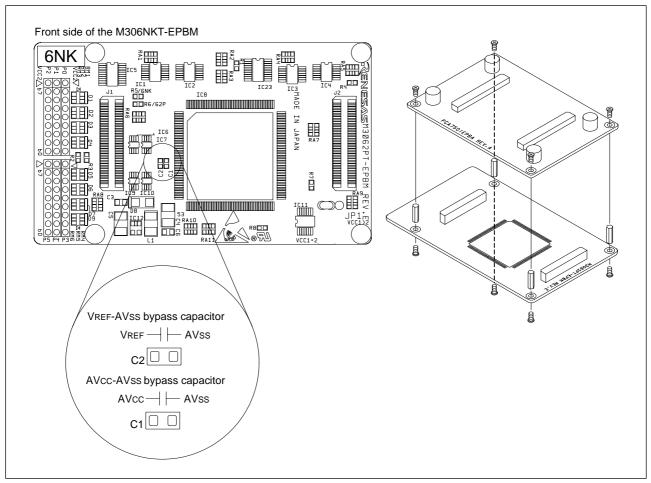


Figure 3.7 Foot pattern for A-D conversion bypass capacitors and the configuration of this product

IMPORTANT

Note on the A-D Converter Function:

• Because a converter board and other devices are used between the evaluation MCU and the user system, the A-D converter operates differently from that of an actual MCU. Make the final evaluation of the A-D converter with an actual MCU.

3.3 Pullup of Emulation Ports

Because this product emulates some I/O ports (P0 to P5, P10), you can not pullup ports P0 to P5 by the pullup control registers. Install the included resistor arrays (51 k Ω) as necessary. Figure 3.8 shows the positions of the pullup resistors. And, Table 3.2 lists the emulation port numbers and the pullup resistor part numbers.

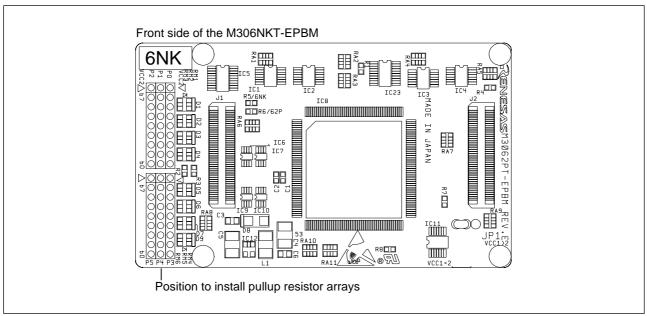


Figure 3.8 Positions of the pullup resistors

Table 3.2 Emulation ports and pullup resistor part numbers

Port	Resistor part
P00P07	RM1 (51 kΩ pullup)
P10P17	RM2 (51 kΩ pullup)
P20P27	RM3 (51 kΩ pullup)
P30P37	RM4 (51 kΩ pullup)
P40P47	RM5 (51 kΩ pullup)
P50P57	RM6 (51 kΩ pullup)

3.4 Connecting the PC7501

Figure 3.9 shows how to connect the PC7501 and the emulation probe.

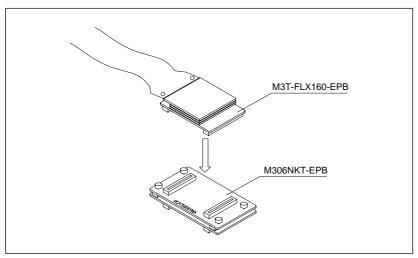


Figure 3.9 Connecting the PC7501 and the emulation probe

⚠ CAUTION

Notes on Connecting the PC7501:



- When connecting the emulation probe, be sure to hold the both sides of the emulation probe horizontally and insert it directly.
- Always shut OFF power before connecting the emulation probe. Otherwise, internal circuits may be damaged.
- The connectors of the M306NKT-EPB are guaranteed for only 50 insertion/removal iterations.

3.5 Connecting the User System (M16C/6N4, /6N5)

Figure 3.10 shows how to connect this product according to your user system.

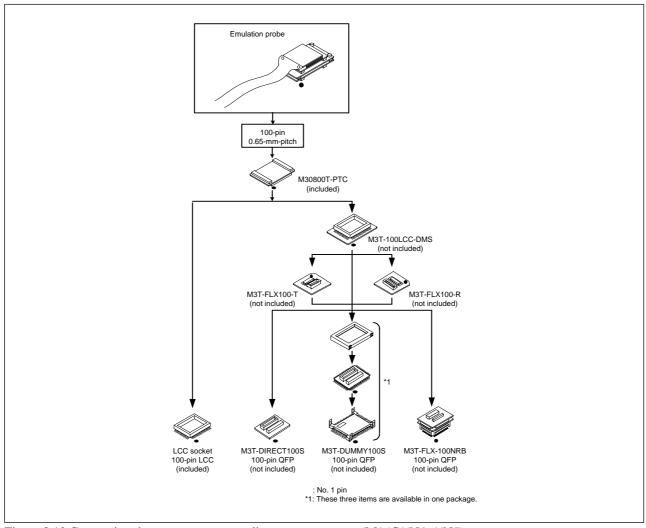


Figure 3.10 Connecting the user system according to user systems (M16C/6N4, /6N5)

⚠ CAUTION

Note on Connecting the User System:



• Take care not to attach a converter board in a wrong direction. It may cause a fatal damage to the emulator and targets system.

3.5.1 Connecting to a 100-pin LCC Socket

Here following is a procedure of connecting to a 100-pin LCC socket (IC61-1004-051 of Yamaichi Electronics Co., Ltd.) on the user system using the included M30800T-PTC.

- (1) Attach the CN2 side of the M30800T-PTC to the J4 side of the M306NKT-EPB.
- (2) Attach the M30800T-PTC to the 100-pin LCC socket.

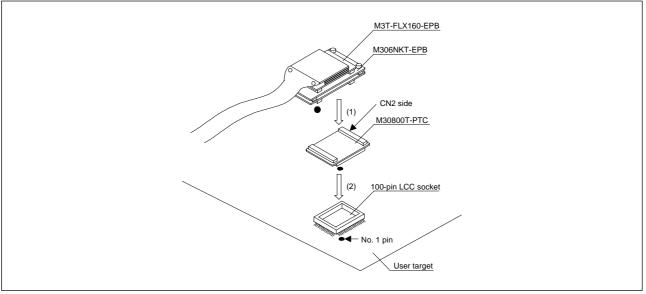


Figure 3.11 Connecting to a 100-pin LCC socket

⚠ CAUTION

Notes on Connecting the User System:



- Take care not to attach a converter board in a wrong direction. It may cause a fatal damage to the emulator and targets system.
- The connectors of the M30800T-PTC are guaranteed for only 50 insertion/removal iterations.
- For purchasing the IC61-1004-051 or for technical information, contact Yamaichi Electronics Co., Ltd. http://www.yamaichi.co.jp/e/index.shtml

3.5.2 Connecting to a 100-pin 0.65-mm-pitch Foot Pattern (Part 1)

Here following is a procedure of connecting to a 100-pin 0.65-mm-pitch foot pattern on the user system using the M3T-DIRECT100S (not included). For details on the M3T-100LCC-DMS (not included) and M3T-DIRECT100S, refer to each user's manual.

- (1) Attach the M3T-DIRECT100S to the user system.
- (2) Attach the M3T-100LCC-DMS to the M3T-DIRECT100S.
- (3) Attach the CN2 side of the M30800T-PTC to the J4 side of the M306NKT-EPB.
- (4) Attach the M30800T-PTC to the M3T-100LCC-DMS.

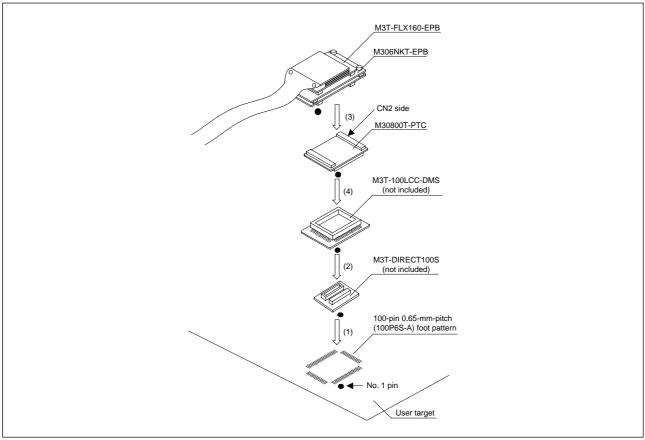


Figure 3.12 Connecting to a 100-pin 0.65-mm-pitch foot pattern (Part 1)

⚠ CAUTION

Notes on Connecting the User System:



- Take care not to attach a converter board in a wrong direction. It may cause a fatal damage to the emulator and targets system.
- The connectors of the M30800T-PTC are guaranteed for only 50 insertion/removal iterations.
- The connectors of the M3T-100LCC-DMS and M3T-DIRECT100S are guaranteed for only 20 insertion/removal iterations.

3.5.3 Connecting to a 100-pin 0.65-mm-pitch Foot Pattern (Part 2)

Here following is a procedure of connecting to a 100-pin 0.65-mm-pitch foot pattern on the user system using the M3T-DUMMY100S (not included). For details on the M3T-100LCC-DMS (not included) and M3T-DUMMY100S, refer to each user's manual.

- (1) Attach the M3T-DUMMY100S to the user system.
- (2) Attach the M3T-100LCC-DMS to the M3T-DUMMY100S.
- (3) Attach the CN2 side of the M30800T-PTC to the J4 side of the M306NKT-EPB.
- (4) Attach the M30800T-PTC to the M3T-100LCC-DMS.

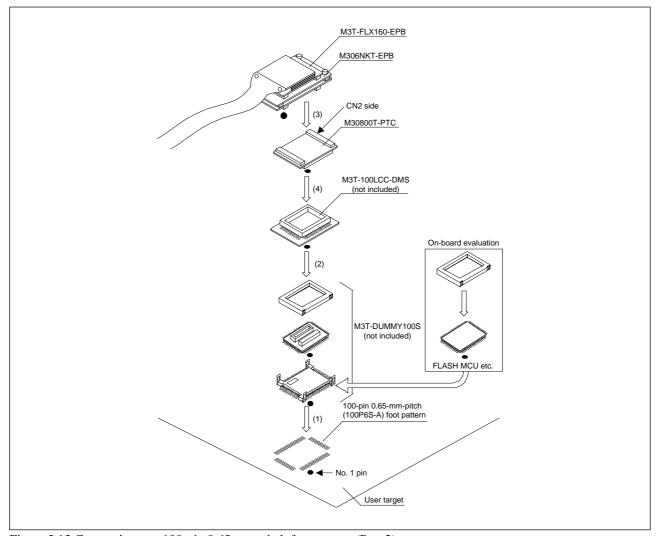


Figure 3.13 Connecting to a 100-pin 0.65-mm-pitch foot pattern (Part 2)

⚠ CAUTION



- Take care not to attach a converter board in a wrong direction. It may cause a fatal damage to the emulator and targets system.
- The connectors of the M30800T-PTC are guaranteed for only 50 insertion/removal iterations.
- The connectors of the M3T-100LCC-DMS and M3T-DUMMY100S are guaranteed for only 20 insertion/removal iterations.

3.5.4 Connecting to a 100-pin 0.65-mm-pitch Foot Pattern (Part 3)

Here following is a procedure of connecting to a 100-pin 0.65-mm-pitch foot pattern on the user system using the M3T-FLX-100NRB (not included). For details on the M3T-100LCC-DMS (not included) and M3T-FLX-100NRB, refer to each user's manual.

- (1) Attach the NQPACK100RB included with the M3T-FLX-100NRB to the user system.
- (2) Attach the YQPACK100RB included with the M3T-FLX-100NRB to the NQPACK100RB and secure it with the YQ-GUIDE's.
- (3) Attach the M3T-FLX-100NRB to the YQPACK100RB.
- (4) Attach the M3T-100LCC-DMS to the M3T-FLX-100NRB.
- (5) Attach the CN2 side of the M30800T-PTC to the J4 side of the M306NKT-EPB.
- (6) Attach the M30800T-PTC to the M3T-100LCC-DMS.

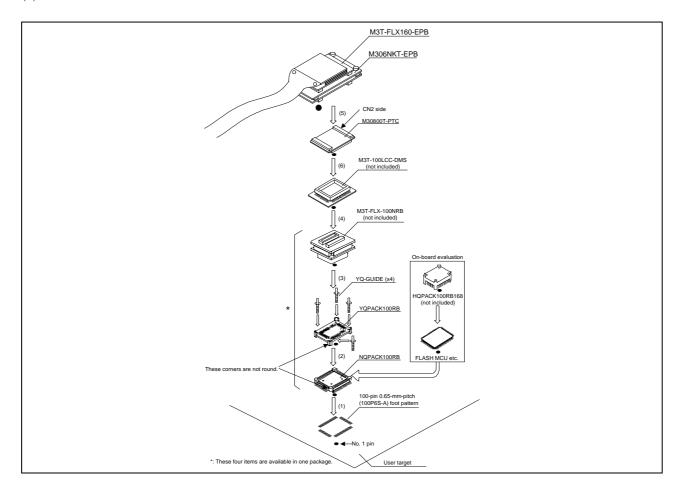


Figure 3.14 Connecting to a 100-pin 0.65-mm-pitch foot pattern (Part 3) $\,$

⚠ CAUTION



- Take care not to attach a converter board in a wrong direction. It may cause a fatal damage to the emulator and targets system.
- The connectors of the M30800T-PTC are guaranteed for only 50 insertion/removal iterations.
- The connectors of the M3T-100LCC-DMS and M3T-FLX-100NRB are guaranteed for only 20 insertion/removal iterations.

3.6 Connecting the User System (M16C/6NK, /6NL, /6NM, /6NN)

Figure 3.15 shows how to connect this product according to your user system.

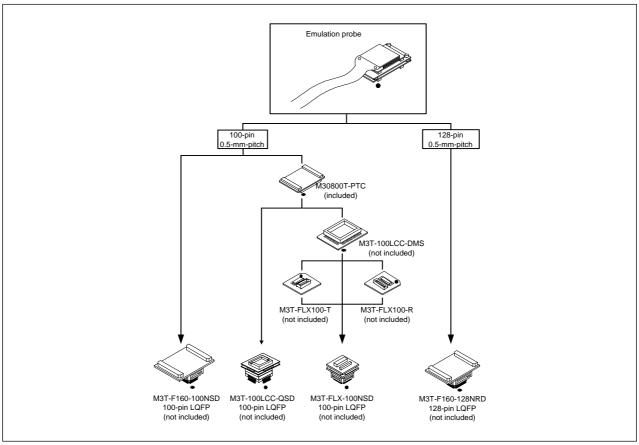


Figure 3.15 Connecting the user system according to user systems (M16C/6NK, /6NL, /6NM, /6NN)

⚠ CAUTION

Note on Connecting the User System:



• Take care not to attach a converter board in a wrong direction. It may cause a fatal damage to the emulator and targets system.

3.6.1 Connecting to a 100-pin 0.5-mm-pitch Foot Pattern (Part 1)

Here following is a procedure of connecting to a 100-pin 0.5-mm-pitch foot pattern on the user system using the M3T-F160-100NSD (not included). For details on the M3T-F160-100NSD, refer to its user's manual.

- (1) Attach the NQPACK100SD included with the M3T-F160-100NSD to the user system.
- (2) Attach the YQPACK100SD included with the M3T-F160-100NSD to the NQPACK100SD and secure it with the YQ-GUIDE's.
- (3) Attach the CN2 side of the M3T-F160-100NSD to the J4 side of the M306NKT-EPB.
- (4) Attach the M3T-F160-100NSD to the YQPACK100SD.

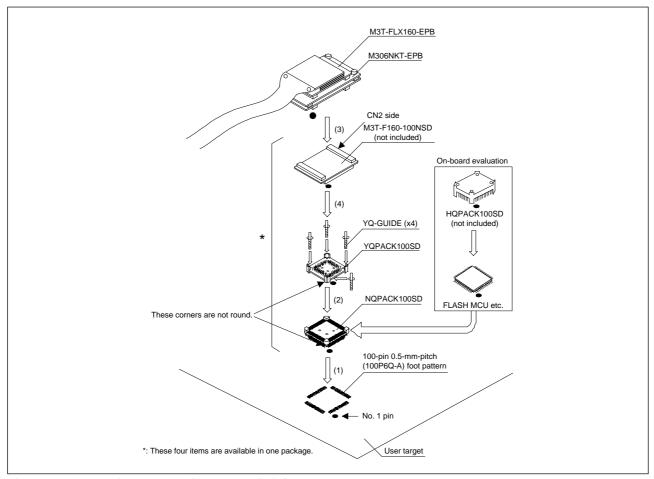


Figure 3.16 Connecting to a 100-pin 0.5-mm-pitch foot pattern (Part 1)

⚠ CAUTION



- Take care not to attach a converter board in a wrong direction. It may cause a fatal damage to the emulator and targets system.
- The connectors of the M3T-F160-100NSD are guaranteed for only 50 insertion/removal iterations.

3.6.2 Connecting to a 100-pin 0.5-mm-pitch Foot Pattern (Part 2)

Here following is a procedure of connecting to a 100-pin 0.5-mm-pitch foot pattern on the user system using the M3T-100LCC-QSD (not included). For details on the M3T-100LCC-QSD, refer to its user's manual.

- (1) Attach the M3T-100LCC-QSD to the user system.
- (2) Attach the CN2 side of the M30800T-PTC to the J4 side of the M306NKT-EPB.
- (3) Attach the M30800T-PTC to the M3T-100LCC-QSD.

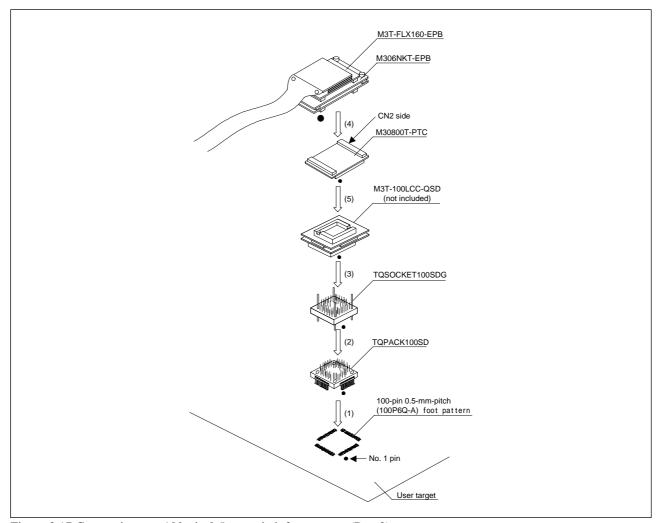


Figure 3.17 Connecting to a 100-pin 0.5-mm-pitch foot pattern (Part 2)

⚠ CAUTION



- Take care not to attach a converter board in a wrong direction. It may cause a fatal damage to the emulator and targets system.
- The connectors of the M30800T-PTC and M3T-100LCC-QSD are guaranteed for only 50 insertion/removal iterations.

3.6.3 Connecting to a 100-pin 0.5-mm-pitch Foot Pattern (Part 3)

Here following is a procedure of connecting to a 100-pin 0.5-mm-pitch foot pattern on the user system using the M3T-FLX-100NSD (not included). For details on the M3T-100LCC-DMS (not included) and M3T-FLX-100NSD, refer to each user's manual.

- (1) Attach the M3T-FLX-100NSD to the user system.
- (2) Attach the M3T-100LCC-DMS to the M3T-FLX-100NSD.
- (3) Attach the CN2 side of the M30800T-PTC to the J4 side of the M306NKT-EPB.
- (4) Attach the M30800T-PTC to the M3T-100LCC-DMS.

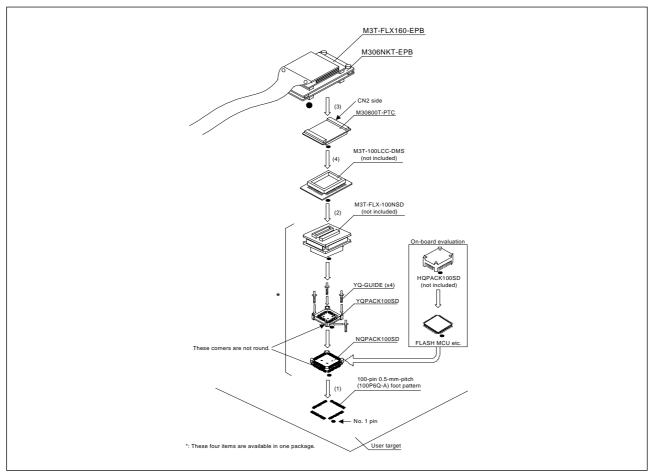


Figure 3.18 Connecting to a 100-pin 0.5-mm-pitch foot pattern (Part 3)

⚠ CAUTION



- Take care not to attach a converter board in a wrong direction. It may cause a fatal damage to the emulator and targets system.
- The connectors of the M30800T-PTC are guaranteed for only 50 insertion/removal iterations.
- The connectors of the M3T-100LCC-DMS and M3T-FLX-100NSD are guaranteed for only 20 insertion/removal iterations.

3.6.4 Connecting to a 128-pin 0.5-mm-pitch Foot Pattern

Here following is a procedure of connecting to a 128-pin 0.5-mm-pitch foot pattern on the user system using the M3T-F160-128NRD (not included). For details on the M3T-F160-128NRD, refer to its user's manual.

- (1) Attach the NQPACK128RD included with the M3T-F160-128NRD to the user system.
- (2) Attach the YQPACK128RD included with the M3T-F160-128NRD to the NQPACK128RD and secure it with the YQ-GUIDE's.
- (3) Attach the CN2 side of the M3T-F160-128NRD to the J4 side of the M306NKT-EPB.
- (4) Attach the M3T-F160-128NRD to the YQPACK128RD.

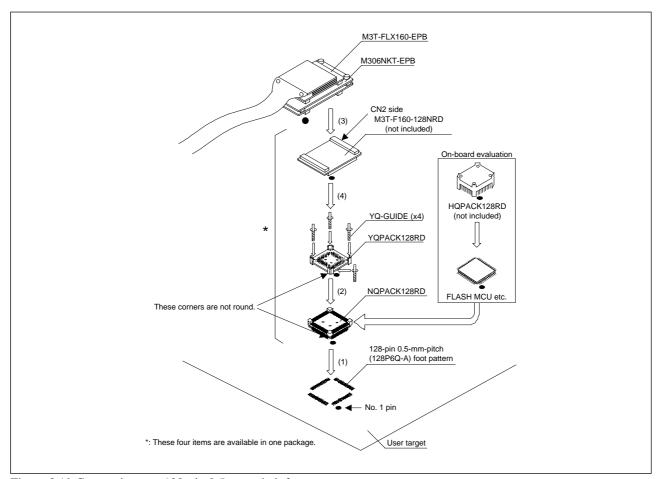


Figure 3.19 Connecting to a 128-pin 0.5-mm-pitch foot pattern

⚠ CAUTION



- Take care not to attach a converter board in a wrong direction. It may cause a fatal damage to the emulator and targets system.
- The connectors of the M3T-F160-128NRD are guaranteed for only 50 insertion/removal iterations.

МЕМО		

Chapter 4. Usage

This chapter describes from turning on the power of this product to starting up the emulator debugger.

4.1	Turning On the Power	46
	4.1.1 Checking Connections of the Emulator System	46
	4.1.2 Turning ON/OFF the Power	
	4.1.3 Power Supply to the User System	46
	4.1.4 LED Display When the PC7501 Starts Up Normally	
4.2	Downloading Firmware	48
	4.2.1 When It is Necessary to Download Firmware	48
	4.2.2 Downloading Firmware in Maintenance Mode	48
4.3	Self-check	49
	4.3.1 Self-check Procedure	49
	4.3.2 If an Error is Detected in the Self-check	50

4.1 Turning On the Power

4.1.1 Checking Connections of the Emulator System

Before turning the power ON, check the connection of the interface cable to the host machine, PC7501, emulation probe, and user system.

4.1.2 Turning ON/OFF the Power

Turn ON the power of the emulator and user system as simultaneously as possible.

Turn OFF the power of the emulator and user system as simultaneously as possible.

Do not leave either the emulator or user system powered on, because of leakage current the internal circuits may be damaged.

When turning ON the power again after shutting OFF the power, wait for 10 seconds.

4.1.3 Power Supply to the User System

Pin Vcc is connected in order to monitor user system voltage. For this reason, the emulator cannot supply power to the user system. Therefore, provide the user system with a separate power supply.

The voltage of the user system should be as follows.

$$3.0 \text{ V} \leq \text{Vcc} \leq 5.5 \text{ V}$$

Do not change the voltage of the user system after turning on the power.

4.1.4 LED Display When the PC7501 Starts Up Normally

Figure 4.1 shows upper panel LED lighting status when the emulator started up properly. Check it when starting up the emulator system.

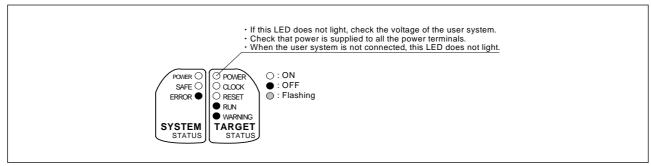


Figure 4.1 LED display of the PC7501 when the power turned on

IMPORTANT

Note on Memory Expansion or Microprocessor Mode:

• To use the memory expansion or microprocessor mode, be sure to set pins RDY* and HOLD* so that they are not active at startup. Otherwise the emulator system will not start up correctly.

Note on the Target Status POWER LED:

• If your MCU has two or more Vcc terminals, the LED does not light unless power is supplied to all the terminals.

Note on the Target Status CLOCK LED:

- If the LED is not turned on, check the following.
 - After powering on the PC7501 (before starting up the emulator debugger):
 Make sure that the oscillator circuit board is properly installed in the PC7501 and it is oscillating normally.
 - (2) After the emulator debugger is started up (after the Init dialog box settings are completed): Make sure that the oscillator selected in the Init dialog box is oscillating normally.

4.2 Downloading Firmware

4.2.1 When It is Necessary to Download Firmware

It is necessary to download the firmware in the cases listed below. Normally, the following are automatically detected when the emulator debugger is started up, and the firmware is downloaded.

- When you use this product for the first time
- When the emulator debugger or firmware has been upgraded
- When you use this product with a PC7501 which was used with another emulation probe before

When you use this product for the first time or when the power is unexpectedly shut down, redownload the firmware in maintenance mode.

4.2.2 Downloading Firmware in Maintenance Mode

Download firmware in the special mode called maintenance mode as explained here following. Figure 4.2 shows LED displays when downloading firmware.

The user system must not be connected when you download the firmware.

- (1) Set the interface select switch on the rear panel of the PC7501 to the LPT side and connect the LPT parallel interface cable to the PC7501 and the host machine.
- (2) Within 2 seconds of activating power to the emulator, press the system reset switch on the PC7501 front panel to start maintenance mode. When the emulator is switched to maintenance mode, the System Status SAFE LED begins to flash.
- (3) Start up the emulator debugger. When settings in the Init dialog box is complete, the dialog which urges to download the firmware will appear. Download firmware following messages. Required time for downloading the firmware is about 60 seconds.

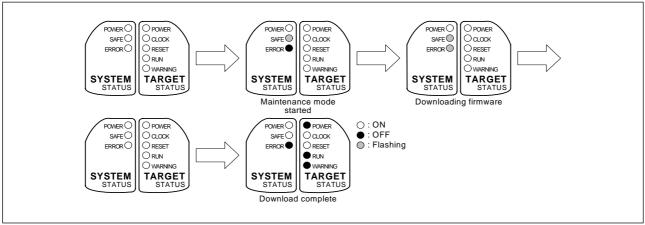


Figure 4.2 LEDs during firmware download

IMPORTANT

Note on Downloading Firmware:

• Do not shut OFF power while firmware is being downloaded. Doing so, the emulator will not start up properly. If power is shut off by mistake, redownload the firmware in maintenance mode.

4.3 Self-check

4.3.1 Self-check Procedure

To run the self-check of the emulator, do so as explained here below. While the self-check is in progress, the LEDs will change as shown in Figure 4.3.

- (1) If the user system is connected, disconnect it.
- (2) Within 2 seconds of activating power to the emulator, press the system reset switch on the emulator front panel to switch the emulator to maintenance mode.
- (3) Check the SAFE LED starts flashing and then press the system reset switch again.
- (4) The self-check will start. If the normal result is displayed in about 30 seconds, the self-check terminated normally.

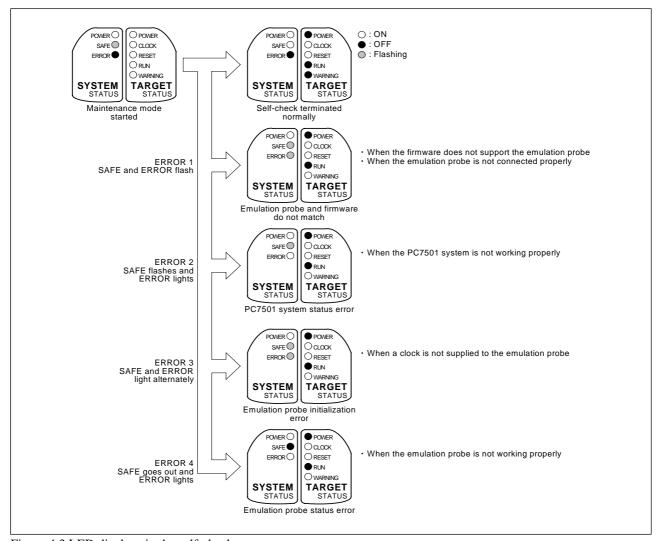


Figure 4.3 LED displays in the self-check

4.3.2 If an Error is Detected in the Self-check

If the self-check does not result normally (ERROR 1 to ERROR 4 in Figure 4.3), check the following.

- Whether the emulation probe and PC7501 are connected properly.
- Whether the proper firmware has been downloaded.

IMPORTANT

Note on Self-check:

• If the self-check do not result normally (excluding user system errors), the emulation probe may be damaged. Then contact your local distributor.

Chapter 5. Specifications

This chapter describes specifications of this product.

5.1	Specifications	52
	Operation Timing of Memory Expansion Mode and Microprocessor Mode (5 V)	
5.3	Connection Diagram	58
5.4	External Dimensions	60
	5.4.1 External Dimensions of the Emulation Probe	60
	5.4.2 External Dimensions of the Converter Board M30800T-PTC	61
	5.4.3 External Dimensions of the Converter Board M3T-F160-100NSD	62
	5.4.4 External Dimensions of the Converter Board M3T-F160-128NRD	62

5.1 Specifications

Table 5.1 Specifications of the M306NKT-EPB

Table 5.1 Specifications of the M	1			
Emulator	PC7501			
Applicable MCU		oup M16C/6NK, M16C/6NL, M	16C/6NM, M16C/6NN, M16C/6N4,	
	M16C/6N5			
Evaluation MCU	M306NMFJC	SP (two pieces)		
	ROM: 512 K	B + 4 KB, RAM: 31 KB		
Operating modes	M16C/6N4	Operating modes	Single-chip mode	
Maximum operating frequency	M16C/6N5 Memory expansion mode			
Operating voltage			Microprocessor mode	
		Maximum operating frequency 20 MHz (when using PLL):		
			4.25.5 V	
		Applicable voltage	4.25.5 V	
	M16C/6NK	Operating modes	Single-chip mode	
	M16C/6NL	Maximum operating frequency	24MHz (when using PLL):	
	M16C/6NM		3.05.5 V	
	M16C/6NN	Applicable voltage	3.05.5 V	
Emulation memory	(1) 512 KB -	+ 4 KB for internal ROM of MCU		
_	0F000h	OFFFFh, 80000hFFFFFh, maxi	mum operating frequency: 24 MHz,	
	0 wait	,		
	* When	"Disable the Internal Flash ROM	I" is checked in the MCU tab of the	
		or debugger's MCU Setting dialog		
	(2) 31 KB for internal RAM			
	00400h07FFFh, maximum operating frequency: 24 MHz, 0 wait			
	(3) CS3*C		quency. 2 : 1/11/12, o wait	
	` '		erating frequency: 10 MHz, 0 wait	
Clock oscillator	X_{IN} - X_{OUT} (1 t	•	,	
		ator circuit board		
	Switchable to	external oscillator input or intern	al generator circuit	
	X _{CIN} -X _{COUT} (3			
		ator circuit board		
		external oscillator input		
Operating temperature	5 to 35°C (no			
Storage temperature	-10 to 60°C (1	no dew)		
Power supply to emulator	Supplied from	n DC power supply of the emulator	or main unit	
Connection to user system	For 100-pin L			
(For details, see section 3.5.)	M308007	Γ-PTC (included) + IC61-1004-05	(included)	
Applicable MCUs:		.65-mm-pitch QFP (100P6S-A):	,	
M16C/6N4	_		-100LCC-DMS (not included) +	
M16C/6N5		-DIRECT100S (not included)	` '	
		,	-100LCC-DMS (not included) +	
	` /	-DUMMY100S (not included)	,	
		•	-100LCC-DMS (not included) +	
	* /	-FLX-100NRB (not included)	,	
Connection to user system	For 100-pin 0	.5-mm-pitch LQFP (100P6Q-A):		
(For details, see section 3.6.)	_	-F160-100NSD (not included)		
Applicable MCUs:	* *	800T-PTC (included) + M3T-100l	LCC-QSD (not included)	
M16C/6NK	* *		-100LCC-DMS (not included) +	
M16C/6NL	* /	M3T-FLX-100NSD (not included)		
M16C/6NM		.5-mm-pitch LQFP (128P6Q-A):		
M16C/6NN	_	X-128NRD (not included)		
		. ,		

Vcc=5V

5.2 Operation Timing of Memory Expansion Mode and Microprocessor Mode (5 V)

(1) Separate Bus Timing

Table 5.2 and Figure 5.1 show the bus timing in memory expansion mode and microprocessor mode.

Table 5.2 Memory expansion mode and microprocessor mode (3-wait, accessing external area)

Symbol	Item	Actual N	ICU [ns]	This pro	duct [ns]
Symbol	Item	Min.	Max.	Min.	Max.
td(BCLK-AD)	Address output delay time		25		See left
th(BCLK-AD)	Address output hold time (BCLK standard)	4		See left	
th(RD-AD)	Address output hold time (RD standard)	0		-2	
th(WR-AD)	Address output hold time (WR standard)	(*2)		See left	
td(BCLK-CS)	Chip-select output delay time		25		See left
th(BCLK-CS)	Chip-select output hold time (BCLK standard)	4		See left	
td(BCLK-ALE)	ALE signal output delay time		25		See left
th(BCLK-ALE)	ALE signal output hold time	-4		See left	
td(BCLK-RD)	RD signal output delay time		25		See left
th(BCLK-RD)	RD signal output hold time	0		See left	
td(BCLK-WR)	WR signal output delay time		25		27
th(BCLK-WR)	WR signal output hold time	0		See left	
td(BCLK-DB)	Data output delay time (BCLK standard)		40		See left
th(BCLK-DB)	Data output hold time (BCLK standard)	4		See left	
td(DB-WR)	Data output delay time (WR standard)	(*1)		See left	
th(WR-DB)	Data output hold time (WR standard)	(*2)		See left	

^{*1} Calculated by the following formula according to the frequency of BCLK.

$$\frac{(n-0.5)\times10^9}{f(BCLK)} - 40$$
 [ns] n: "3" for 3-wait

*2 Calculated by the following formula according to the frequency of BCLK.

$$\frac{0.5 \times 10^9}{f(BCLK)} - 10 \quad [ns]$$

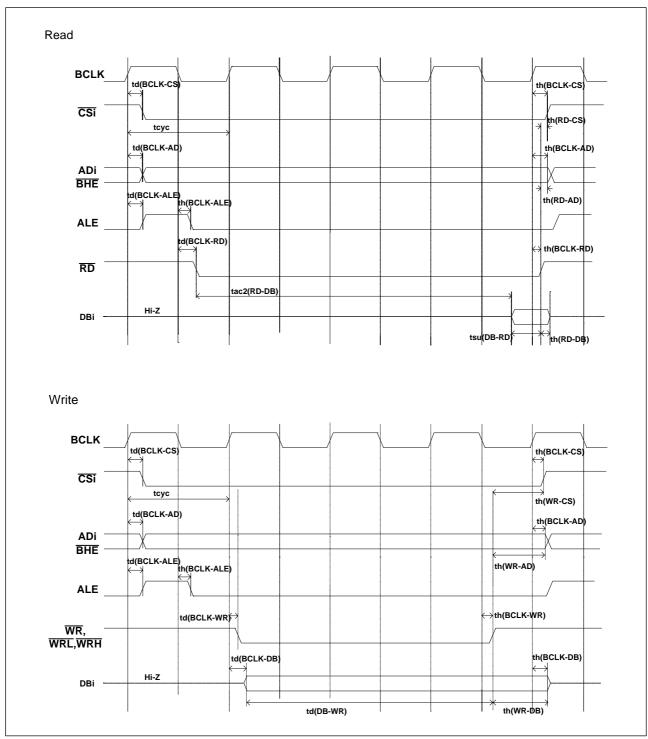


Figure 5.1 Memory expansion mode and microprocessor mode (3-wait, accessing external area)

Vcc=5V

(2) Multiplex Bus Timing

Table 5.3 and Figure 5.2 show the bus timing in memory expansion mode and microprocessor mode (2-wait, accessing external area, using multiplex bus).

Table 5.3 Memory expansion mode and microprocessor mode (2-wait, accessing external area, using multiplex bus)

Symbol	Item	Actual N	ICU [ns]	This product [ns]	
Symbol	nem	Min.	Max.	Min.	Max.
td(BCLK-AD)	Address output delay time		25		See left
th(BCLK-AD)	Address output hold time (BCLK standard)	4		See left	
th(RD-AD)	Address output hold time (RD standard)	(*1)		See left	
th(WR-AD)	Address output hold time (WR standard)	(*1)		See left	
td(BCLK-CS)	Chip-select output delay time		25		See left
th(BCLK-CS)	Chip-select output hold time (BCLK standard)	4		See left	
th(RD-CS)	Chip-select output hold time (RD standard)	(*1)		See left	
th(WR-CS)	Chip-select output hold time (WR standard)	(*1)		See left	
td(BCLK-RD)	RD signal output delay time		25		See left
th(BCLK-RD)	RD signal output hold time	0		See left	
td(BCLK-WR)	WR signal output delay time		25		See left
th(BCLK-WR)	WR signal output hold time	0		See left	
td(BCLK-DB)	Data output delay time (BCLK standard)		40		See left
th(BCLK-DB)	Data output hold time (BCLK standard)	4		See left	
td(DB-WR)	Data output delay time (WR standard)	(*2)		See left	
th(WR-DB)	Data output hold time (WR standard)	(*1)		See left	
td(BCLK-ALE)	ALE output delay time (BCLK standard)		25		See left
th(BCLK-ALE)	ALE output hold time (BCLK standard)	-4		See left	
td(AD-ALE)	ALE output delay time (Address standard)	(*3)		See left	
th(ALE-AD)	ALE output hold time (Address standard)	(*4)		See left	
td(AD-RD)	After address RD signal output delay time	0		See left	
td(AD-WR)	After address WR signal output delay time	0		See left	
tdz(RD-AD)	Address output floating start time		8		15

^{*1} Calculated by the following formula according to the frequency of BCLK.

$$\frac{0.5 \times 10^9}{f(BCLK)} - 10 \quad [ns]$$

*2 Calculated by the following formula according to the frequency of BCLK.

$$\frac{(n-0.5)\times 10^9}{f(\textit{BCLK})} - 40 \quad \text{[ns]} \quad \text{n: "2" for 2-wait}$$

*3 Calculated by the following formula according to the frequency of BCLK.

$$\frac{0.5 \times 10^9}{f(BCLK)} - 25 \quad [ns]$$

*4 Calculated by the following formula according to the frequency of BCLK.

$$\frac{0.5 \times 10^9}{f(BCLK)} - 15 \quad [ns]$$

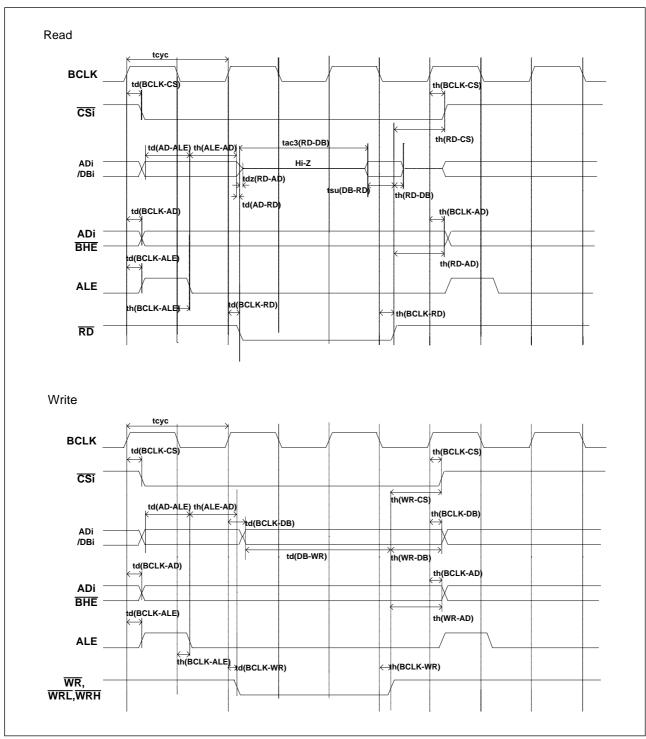


Figure 5.2 Memory expansion mode and microprocessor mode (2-wait, accessing external area, using multiplex bus)

Vcc=5V

(3) Timing Requirements

Tables 5.4 and Figure 5.3 list the timing requirements.

Table 5.4 Timing requirements

Symbol	Item	Actual M	ICU [ns]	CU [ns] This prod	
Symbol	Item	Min.	Max.	Min.	Max.
tsu(DB-RD)	Data input setup time	40		55	
tsu(RDY-BCLK)	RDY* input setup time	30		45	
tsu(HOLD-BCLK)	HOLD* input setup time	40		55	
th(RD-DB)	Data input hold time	0		See left	
th(BCLK-RDY)	RDY* input hold time	0		See left	
th(BCLK-HOLD)	HOLD* input hold time	0		See left	
td(BCLK-HLDA)	HLDA* output delay time		40		See left

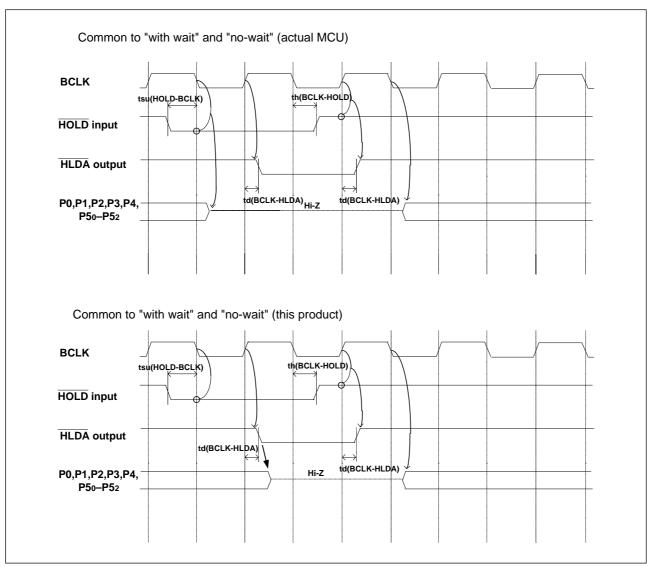


Figure 5.3 Timing requirements

^{*} Compared with an actual MCU, this product enters high-impedance state after a 0.5 cycle delay.

5.3 Connection Diagram

Figures 5.4 shows a connection diagram of the M306NKT-EPB. This connection diagram mainly shows the interface section. The circuits not connected to the user system such as the emulator's control system are omitted. The signals not shown in Figure 5.4 connect the evaluation MCU and the user system directly. Tables 5.5 and 5.6 show IC electric characteristics of this product for reference purposes.

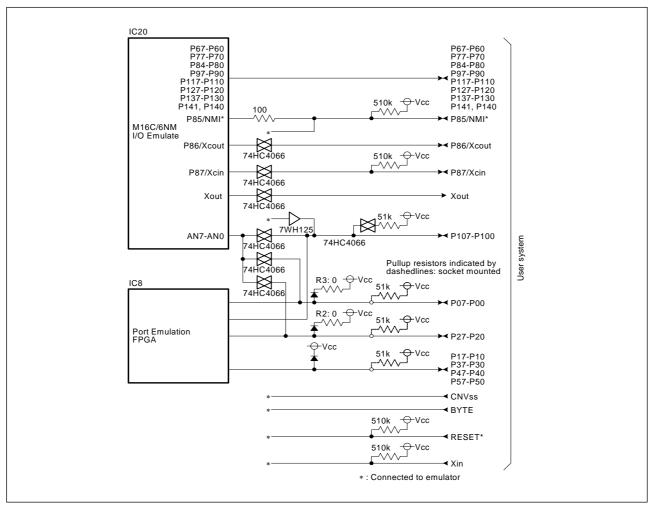


Figure 5.4 Connection diagram

Table 5.5 Electrical characteristics of 74HC4066

Cumbal	Item	Condition		Standard values		
Symbol	Symbol Item		Min.	Standard	Max.	Unit
Ron	ON resistor	Vcc=4.5V	-	96	200	[Ω]
ΔR on	ON resistor difference	Vcc=4.5V	-	10	-	[22]
Ioff	Leak current (Off)	Vcc=12.0V	-	-	±1	[A.]
Iız	Leak current (On, output: open)	Vcc=12.0V	-	-	±1	[µA]

Table 5.6 Electrical characteristics of port emulation EPGA

Symbol	Item	Condition	S	tandard value	es	Unit
Symbol	Item	Condition	Min.	Standard	Max.	Ollit
VIH	"H" level input voltage		2.0	-	5.5	
V_{IL}	"L" level input voltage		-0.5	-	0.8	
Vон		Iон=-8mA DC, Vcc=4.75V	2.4	-	-	
VOH	"H" level output voltage	IOH=-8mA DC, Vcc=3.00V	2.4	-	-	[V]
Vor	VOL "L" level output voltage	IoL=8mA DC, Vcc=4.75V	-	-	0.45	
VOL L		IoL=8mA DC, Vcc=3.00V	-	-	0.45	
Ioz	Leak current (Tristate)	Vo=Vcc or GND	-40	ı	40	[µA]
Cin	I/O pin input capacitance	V _{IN} =0V, f=1.0MHz	-	-	8	[pF]

5.4 External Dimensions

5.4.1 External Dimensions of the Emulation Probe

Figure 5.5 shows external dimensions of the M306NKT-EPB and M30800T-PTC.

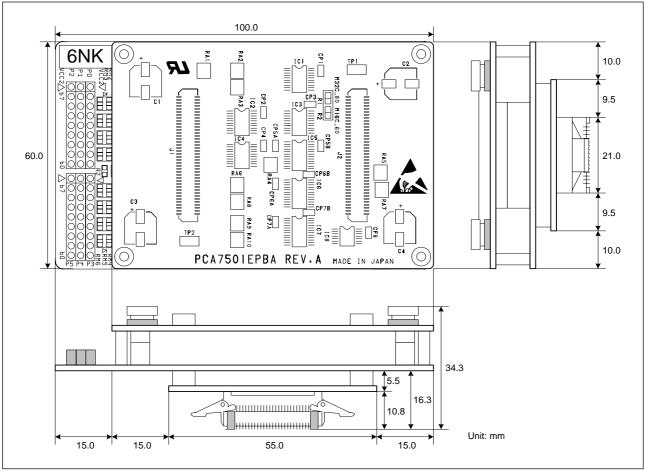


Figure 5.5 External dimensions of the emulation probe

5.4.2 External Dimensions of the Converter Board M30800T-PTC

Figure 5.6 shows external dimensions of the converter board M30800T-PTC (included) for a 100-pin LCC.

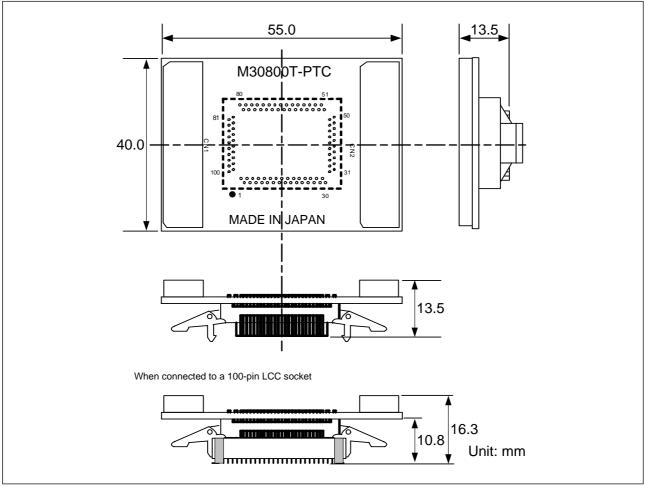


Figure 5.6 External dimensions of the converter board M30800T-PTC

5.4.3 External Dimensions of the Converter Board M3T-F160-100NSD

Figure 5.7 shows external dimensions and a sample foot pattern of the converter board M3T-F160-100NSD (not included) for a 100-pin 0.5-mm-pitch LQFP.

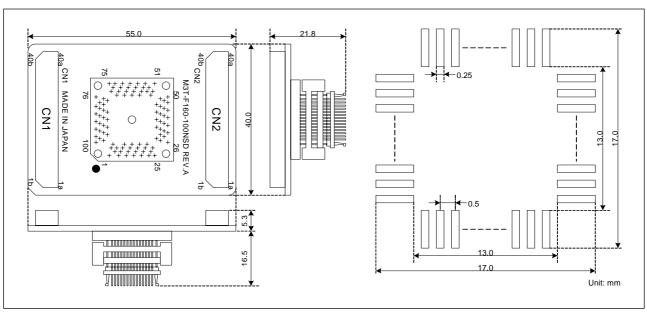


Figure 5.7 External dimensions and a sample foot pattern of the converter board M3T-F160-100NSD

5.4.4 External Dimensions of the Converter Board M3T-F160-128NRD

Figure 5.8 shows external dimensions and a sample foot pattern of the converter board M3T-F160-128NRD (not included) for a 128-pin 0.5-mm-pitch LQFP.

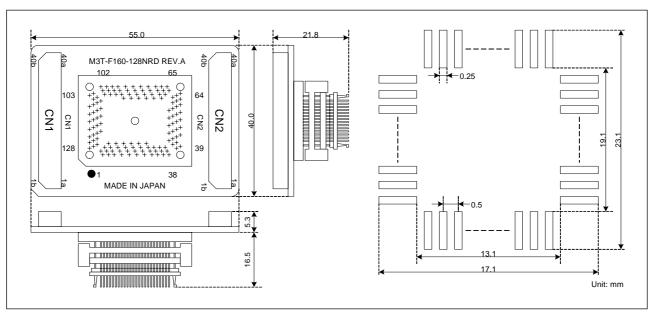


Figure 5.8 External dimensions and a sample foot pattern of the converter board M3T-F160-128NRD

Chapter 6. Troubleshooting

This chapter describes how to troubleshoot when this	product does not work properly
--	--------------------------------

6.1	Flowchart to Remedy the Troubles	64
6.2	When the Emulator Debugger Does Not Start Up Properly	65

6.1 Flowchart to Remedy the Troubles

Figure 6.1 shows the flowchart to remedy the troubles from when power to the emulator is activated until the emulator debugger starts up. For the latest FAQs visit the Renesas Tools Homepage.

http://www.renesas.com/en/tools

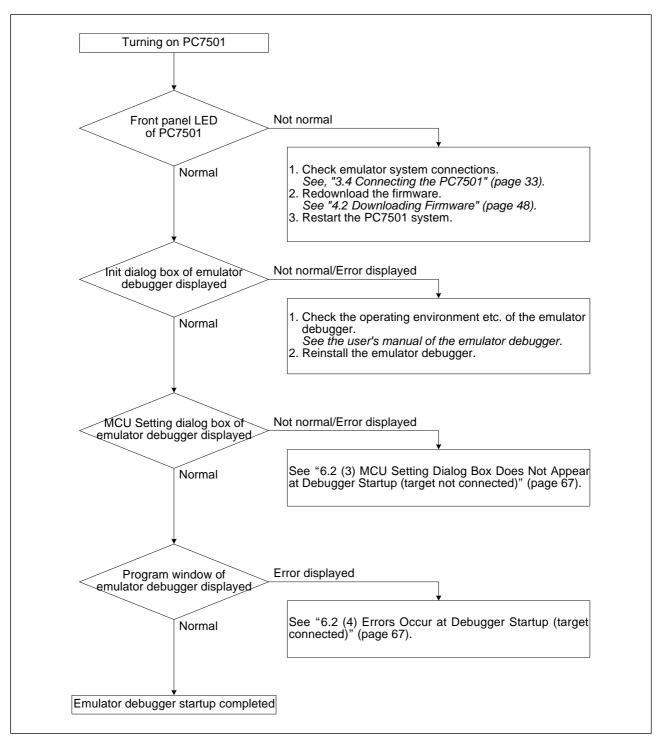


Figure 6.1 Flowchart to remedy the troubles

6.2 When the Emulator Debugger Does Not Start Up Properly

(1) When the LEDs of the PC7501 Shows an Error

Table 6.1 Errors LEDs show and their checkpoints

Error	Connection to the user system	Checkpoint
LEDs do not light up.	-	Check that the power cable is connected to the PC7501. <i>See the user's manual of the PC7501.</i>
All LEDs remain lit.	-	Check that the connection between the PC7501 and this product. See "3.4 Connecting the PC7501" (page 33).
Target Status POWER LED does not light up.	Connected	Check that power is properly supplied to the user system and that the user system is properly grounded.
Target Status CLOCK LED does not light up.	Not connected	 (1) Check that both the main and sub clocks of the emulator debugger are not set to "EXT". See the CLK command of the emulator debugger. (2) Check that the oscillator circuit board is properly installed in the emulator and is oscillating. See "3.1 Selecting Clock Supply" (page 26).
	Connected	Check that the oscillator circuit in the user system is oscillating properly.
Target Status RESET LED does not go out.	Connected	Check that the reset pin of the user system is pulled up.

(2) MCU Setting Dialog Box Does Not Appear at Debugger Startup (target connected)

Table 6.2 Checkpoints of errors at debugger startup (target connected)

Error	Checkpoint	
Communication error occurred.	Check that all emulator debugger settings, interface cable settings	
Data was not sent to the target.	and switches on the rear of the PC7501 match.	
	See the user's manuals of the PC7501 and emulator debugger.	
User system cannot be properly built.	(1) Download the proper firmware.	
	See "4.2 Downloading Firmware" (page 48).	
	(2) Check that the connection between the PC7501 and <i>this product</i> .	
	See "3.4 Connecting the PC7501" (page 33).	
M3T-PD30F version is not the same version	Download the proper firmware.	
as the firmware in the target.	See "4.2 Downloading Firmware" (page 48).	
Target MCU is in the reset state.	(1) Check that the reset pin of the user system is pulled up.	
	(2) Check that the reset pin of the user system has changed from	
	Low to High level.	
Target MCU cannot be reset.	(1) Check that pin NMI* is held High.	
	(2) If in memory expansion mode or microprocessor mode, check	
	pins RDY* and HOLD* are held High.	
	(3) If the reset circuit of the user system has a watchdog timer,	
	disable the timer.	
	(4) Check that power is properly supplied to the user system and that	
	the user system is properly grounded.	
Target is in "HOLD" state.	(1) If in memory expansion mode or microprocessor mode, check	
	pins RDY* and HOLD* are held High.	
	(2) The MCU is either in stop mode or wait mode. Either reset the	
	MCU or cancel the mode with an interrupt.	
	See MCU specifications.	
Target clock is stopped.	Check that the oscillator circuit of the user system is oscillating	
	properly.	
Target MCU is not receiving power.	Check that power is properly supplied to the user system and that the	
	user system is properly grounded.	

(3) MCU Setting Dialog Box Does Not Appear at Debugger Startup (target not connected)

Table 6.3 Checkpoints of errors at debugger startup (target not connected)

Error	Checkpoint		
Communication error occurred.	Check that all emulator debugger settings, interface cable settings		
Data was not sent to the target.	and switches on the rear of the PC7501 match.		
	See the user's manuals of the PC7501 and emulator debugger.		
User system cannot be properly built.	(1) Download the proper firmware.		
	See "4.2 Downloading Firmware" (page 48).		
	(2) Recheck that the connection between the PC7501 and this		
	product.		
	See "3.4 Connecting the PC7501" (page 33).		
M3T-PD30F version is not the same version	Download the proper firmware.		
as the firmware in the target.	See "4.2 Downloading Firmware" (page 48).		
Target is in HOLD state.	(1) If in memory expansion mode or microprocessor mode, check		
	pins RDY* and HOLD* are held High.		
	(2) The MCU is either in stop mode or wait mode. Either reset the		
	MCU or cancel the mode with an interrupt.		
	See MCU specifications.		

(4) Errors Occur at Debugger Startup (target connected)

Table 6.4 Checkpoints of errors at debugger startup (target connected)

Error	Checkpoint
Target MCU is uncontrollable.	(1) Check that pin NMI* is held High.(2) If in Memory expansion mode or microprocessor mode, check that pins RDY* and HOLD* are held High.

МЕМО		

Chapter 7. Maintenance and Guarantee

This chapter describes how to maintenance, repair provisions and how to request for repair.

7.1	Maintenance	70
7.2	Guarantee	70
7.3	Repair Provisions	70
7.4	How to Request for Repair	71

7.1 Maintenance

If dust or dirt collects on any equipment of your emulation system, wipe it off with a dry soft cloth. Do not use thinner or other solvents because these chemicals can cause the equipment's surface coating to separate.

7.2 Guarantee

If your product becomes faulty within one year after its purchase while being used under good conditions by observing "Precautions for Safety" described in Chapter 1 of this user's manual, we will repair or replace your faulty product free of charge. Note, however, that if your product's fault is raised by any one of the following causes, we will repair it or replace it with new one with extra-charge:

- Misuse, abuse, or use under extraordinary conditions
- Unauthorized repair, remodeling, maintenance, and so on
- Inadequate user's system or misuse of it
- Fires, earthquakes, and other unexpected disasters

In the above cases, contact your local distributor. If your product is being leased, consult the leasing company or the owner.

7.3 Repair Provisions

(1) Repair with extra-charge

The products elapsed more than one year after purchase can be repaired with extra-charge.

(2) Replacement with extra-charge

If your product's fault falls in any of the following categories, the fault will be corrected by replacing the entire product instead of repair, or you will be advised to purchase new one, depending on the severity of the fault.

- Faulty or broken mechanical portions
- Flaw, separation, or rust in coated or plated portions
- Flaw or cracks in plastic portions
- Faults or breakage caused by improper use or unauthorized repair or modification
- Heavily damaged electric circuits due to overvoltage, overcurrent or shorting of power supply
- Cracks in the printed circuit board or burnt-down patterns
- Wide range of faults that makes replacement less expensive than repair
- Unlocatable or unidentified faults
- (3) Expiration of the repair period

When a period of one year elapses after the model was dropped from production, repairing products of the model may become impossible.

(4) Transportation fees at sending your product for repair

Please send your product to us for repair at your expense.

7.4 How to Make Request for Repair

If your product is found faulty, follow the procedure below to send your product for repair.

Customer



Fill in the Repair Request Sheet included with this product, then send it along with this product for repair to your local distributor. Make sure that information in the Repair Request Sheet is written in as much detail as possible to facilitate repair.

Distributor



After checking the contents of fault, the distributor should please send the faulty product along with the Repair Request Sheet to Renesas Solutions Corp.

Renesas Solutions

When the faulty product is repaired, it will be returned to the customer at the earliest convenience.

⚠ CAUTION

Note on Transporting the Product:



• When sending your product for repair, use the packing box and cushion material supplied with this product when delivered to you and specify handling caution for it to be handled as precision equipment. If packing of your product is not complete, it may be damaged during transportation. When you pack your product in a bag, make sure to use conductive polyvinyl supplied with this product (usually a blue bag). When you use other bags, they may cause a trouble on your product because of static electricity.

MEMO		

